

Face Recognition With Palm Vein&QR Code User Manual

Catalog

Chapter 1 Product Overview	2
1.1 Product Introduction	2
1.2 Technical Parameters	5
Chapter 2 Appearance	6
2.1 Appearance Diagram	6
Chapter 3 Installation	10
3.1 Installed on Wall	10
3.2 Installed on Turnstile	11
3.3 Installed on Ground	13
Chapter 4 Wiring Instructions	14
4.1 Wiring Diagram	14
4.2 Wiring Connection	17
Chapter 5 User Operating Instructions	24
5.1 Main Menu	24
5.2 User Management	25
5.2.1 Registered Users	25
5.2.2 User Browsing	28
5.2.3 Department Settings	30
5.2.4 Backup User Information	30
5.2.5 Restore User Information	30
5.3 Attendance Rules	30
5.4 Report Management	32
5.5 System Settings	33
5.5.1 General Settings	33
5.5.2 Advanced Setting	35
5.5.3 Recognition Settings	36
5.5.4 Alarm Settings	37
5.6 Access Control Setting	37
5.7 Record Viewing	38
5.8 Communication	39
5.9 Device Information	42
Chapter 6 Instructions for using the client	44
6.1 Facial machine installation and settings	44
6.2 Adding Face and Authorizing	49
6.3 Record Collection and Viewing	54
6.3.1 Record Collection	54

6.3.2 Record Viewing	57
Chapter 7 Cloud System Operation Instructions	59
7.1 Installing Facial Terminal	59
7.2 Add personnel and authorization	61
7.2.1 Add User	61
7.2.1 User Authorization	62
7.3 Record Viewing	63
Appendix 1 Precautions for Installation Process	64
Appendix 2 Introduction to Face Enroll and Usage	65
Appendix 3 Device Dimension	66

Chapter 1 Product Overview


The facial palm vein machine is an access control device based on the LINUX operating system, mainly suitable for application such as office gates, high-end office building lobby channel management systems, various club member management systems, on-site labor real name system, smart community pedestrian channel system, and scenic area ticket system.

1.1 Product Introduction


- Support network management and standalone running.
- Multiple door opening methods such as Mifare card reading, facial recognition, QR code, palm vein, etc.
- Adopting a multi-core ARM processor, integrating massive memory.
- Wide dynamic strong light suppression technology, suitable for outdoor use.
- 2 million high-definition pixel binocular camera with high speed recognition and high accuracy, supporting liveness detection.
- The capacity can reach 20,000 users, 20,000 faces, 10,000 palm veins, 20,000 QR codes, 20,000 cards, 20,000 passwords, 50,000 photo logs, and 1 million attendance logs.
- TCP/IP and WIFI networking
- 1 set of door opening relays, 1 set of door magnets, and 1 set of alarm outputs
- LAN, cloud system, and mobile App management

- Multiple national languages and OEM/ODM, including Simplified Chinese, Traditional Chinese, English, Portuguese, Spanish, Russian, French, Japanese, Korean, Thai, and Arabic.


Following are the product models:

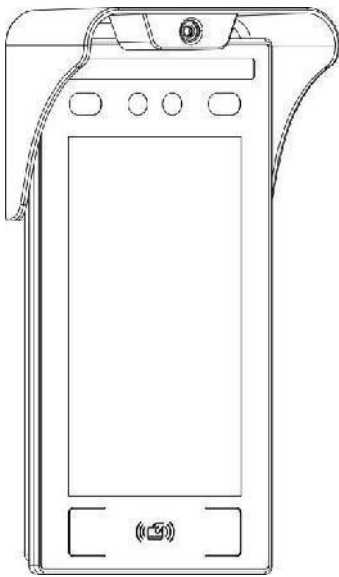


A Type

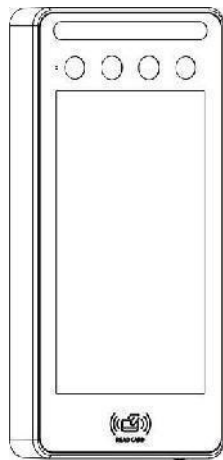


B Type

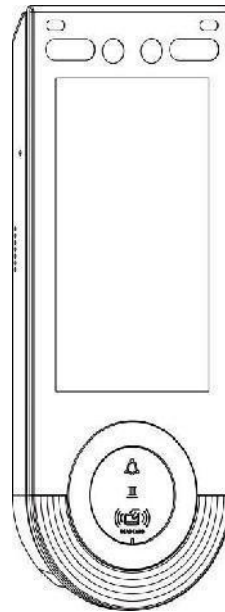


C Type

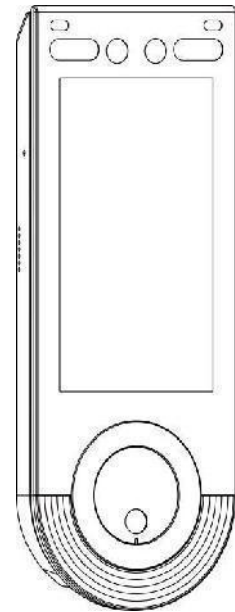

**Support for customized body
temperature detection**

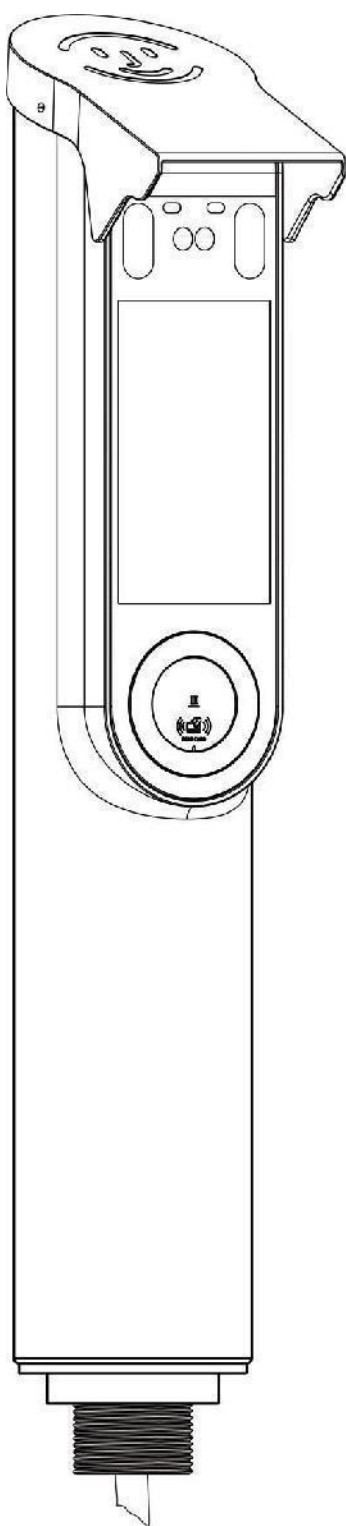

D Type

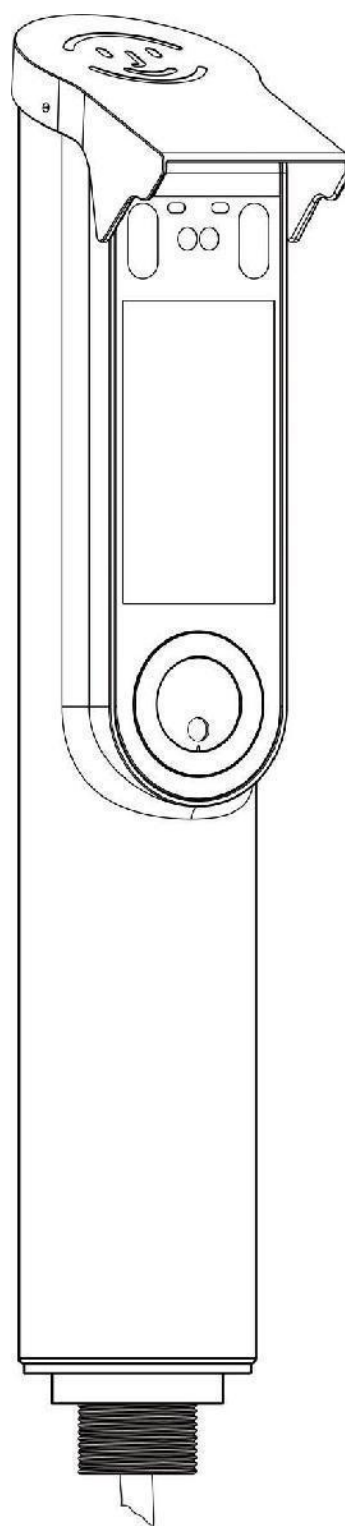


Support for customized body temperature detection

1.2 Technical Parameters

MODEL Name	A Type	B Type	C Type	D Type
Material	ABS Housing+acrylic panel	ABS Housing+Tempere d glass panel	Metal+ABS Housing,tempere d glass panel	ABS Housing+acrylic pane
Weight	0.6KG	0.8KG	0.7KG	1.8KG
Size	243×126×75mm	180×88×22mm	232×88×25mm	580×155×94mm
Display	7-inch	5-inch	5.5-inch	
Camera	Wide dynamic binocular 2 million high-definition pixel camera			
Working Voltage	DC12V(9-14V)			
Working Current	1300mA			
Working Environment	Temperature:-10 to 65℃; Humidity: 10-90%,non condensing			
WIFI	Can be customized			
USB	Support		Dual USB	Support
Storage Capacity	512M DDR3 memory, 8GB EMMC storage		Memory 1GB DDR3, storage 8GB EMMC	
Operating System	LINUX System			
Management Mode	Touch screen, CS system, BS cloud system(Mobile App Management)			
Comparison Mode	1: N / 1: 1			
Elevator Expansion	Support elevator/cabinet lock control board expansion port			
Firmware Upgrade	Support OTA upgrade or USB firmware upgrade			
Algorithm Support	Face Recognition, Palm Recognition, QR code Recognition			
Recognition Speed	≤ 0.3S			
Communication	TCP/IP (Support WIFI)			
Access Control Interface Protocol	Wiegand26/34/66			
Other Interface	Exit Button×1, Door Sensor×1, Fire Alarm×1, Alarm Output×1, Wiegand Output×1, Wiegand Input×1, Lock Control×1, USB×1, RS485×1			

Chapter 2 Appearance


2.1 Appearance Diagram

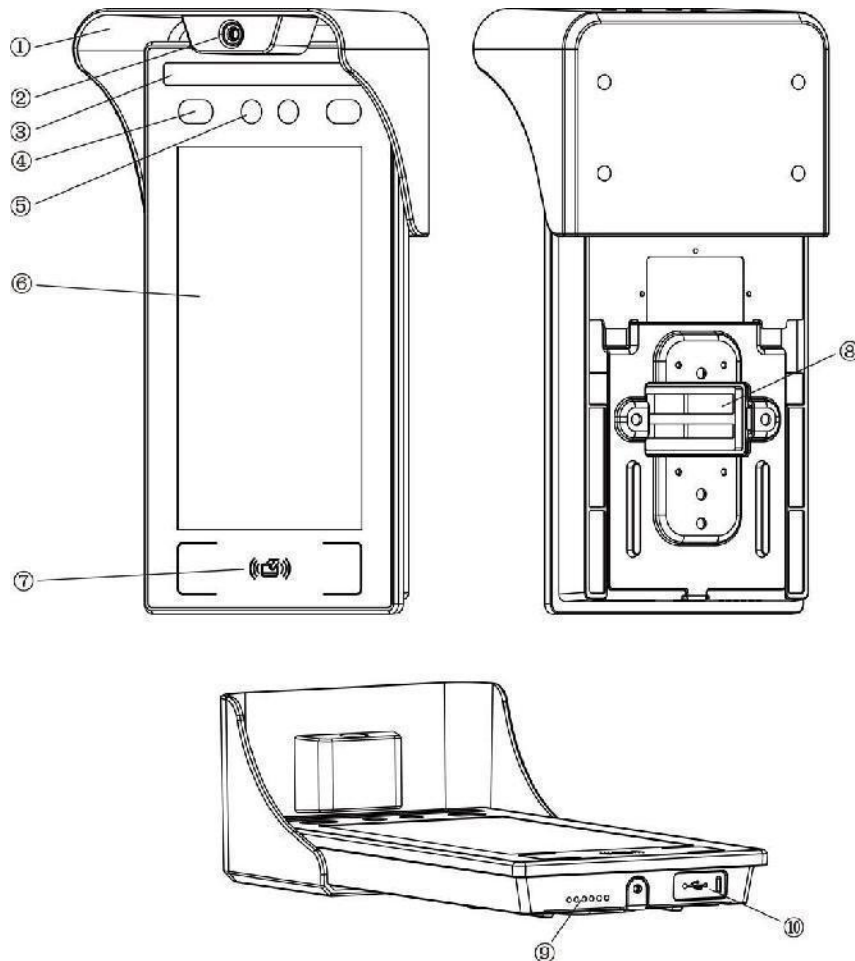

Appearance diagram of model A


- ① Waterproof Cover
- ② Temperature Detection
- ③ Intelligent Light
- ④ IR Supplement Light
- ⑤ Camera
- ⑥ Touch Screen
- ⑦ Card Area
- ⑧ Wiring Ports

- ⑨ Speaker
- ⑩ USB Port+Reset Key

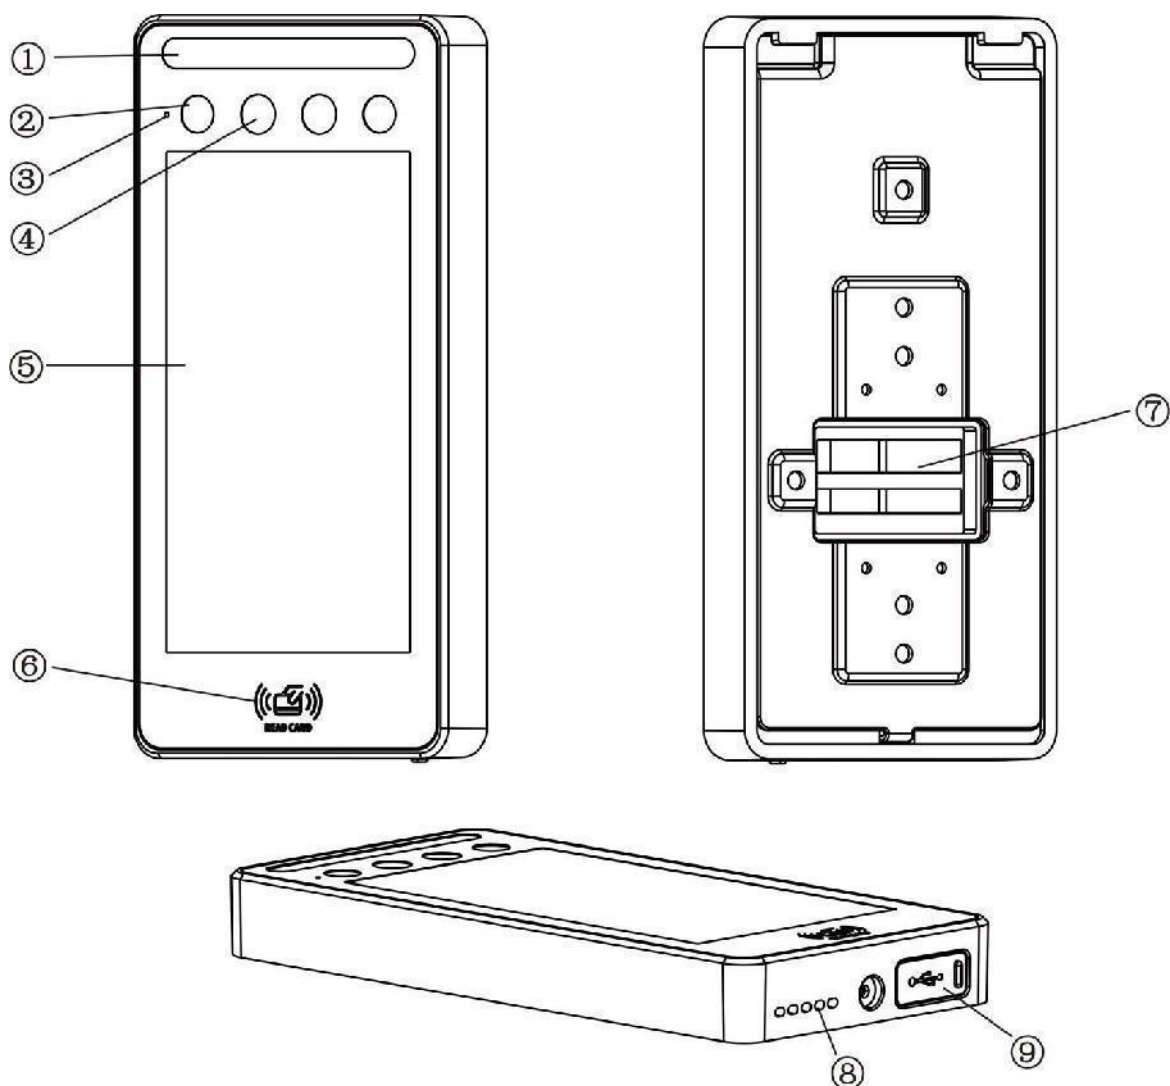


Appearance diagram of model B

- ① Intelligent Light
- ② IR Supplement Light
- ③ Microphone
- ④ Camera
- ⑤ Touch Screen
- ⑥ Card Area
- ⑦ Wiring Ports
- ⑧ Speaker
- ⑨ USB Port+Reset Key

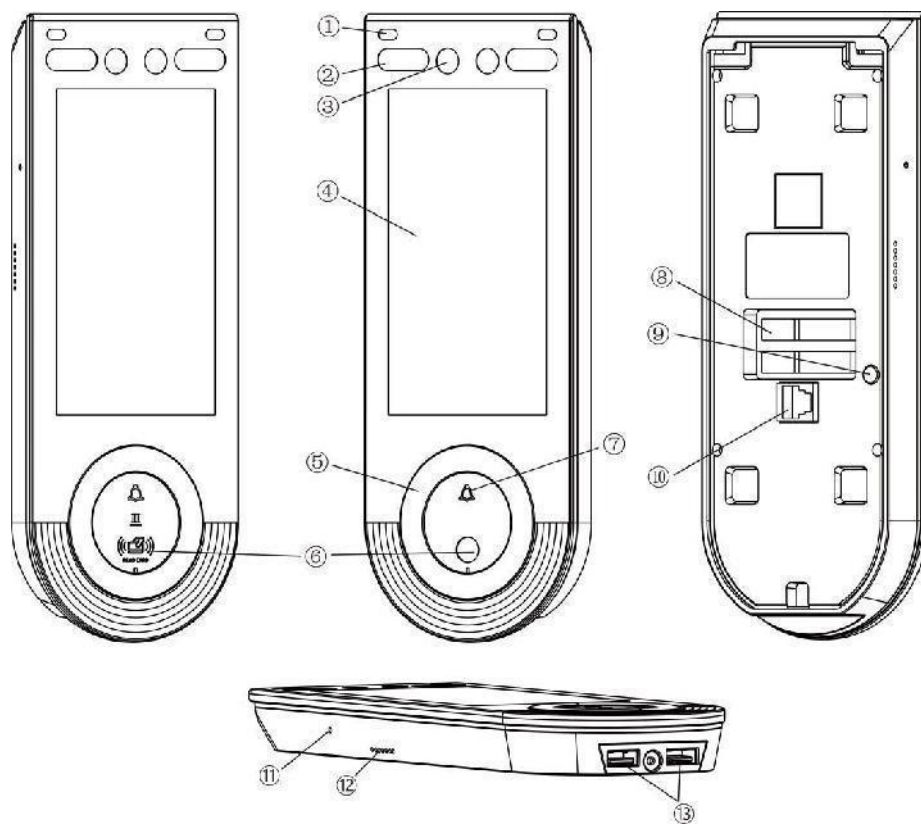

Appearance diagram of model C

- ① IR Supplement Light
- ② Intelligent Light
- ③ Camera
- ④ Touch Screen
- ⑤ Indicator Light
- ⑥ Card Area+Temperature Detection(Customized)
- ⑦ Doorbell
- ⑧ Wiring Ports
- ⑨ Tamper Button
- ⑩ TCP/IP Communication Port
- ⑪ Reset Button
- ⑫ Speaker
- ⑬ Two USB interface

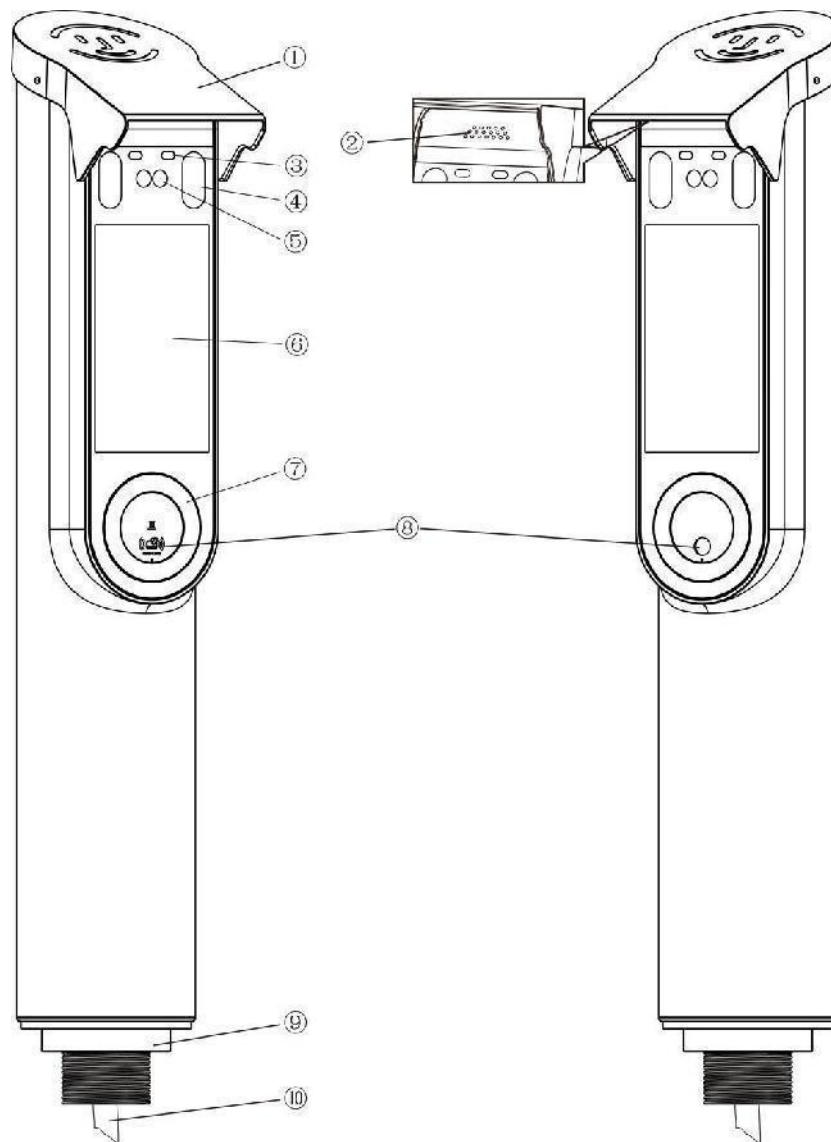


Appearance diagram of model D

- ① Waterproof Cover
- ② Speaker
- ③ IR Supplement Light
- ④ Intelligent Light
- ⑤ Camera
- ⑥ Touch Screen
- ⑦ Indicator Light
- ⑧ Card Area+Temperature Detection(Customized)
- ⑨ Fixed Screw Nut
- ⑩ TCP/IP communication port, USB, terminal extension cable, power DC head

Chapter 3 Installation

3.1 Installed on Wall

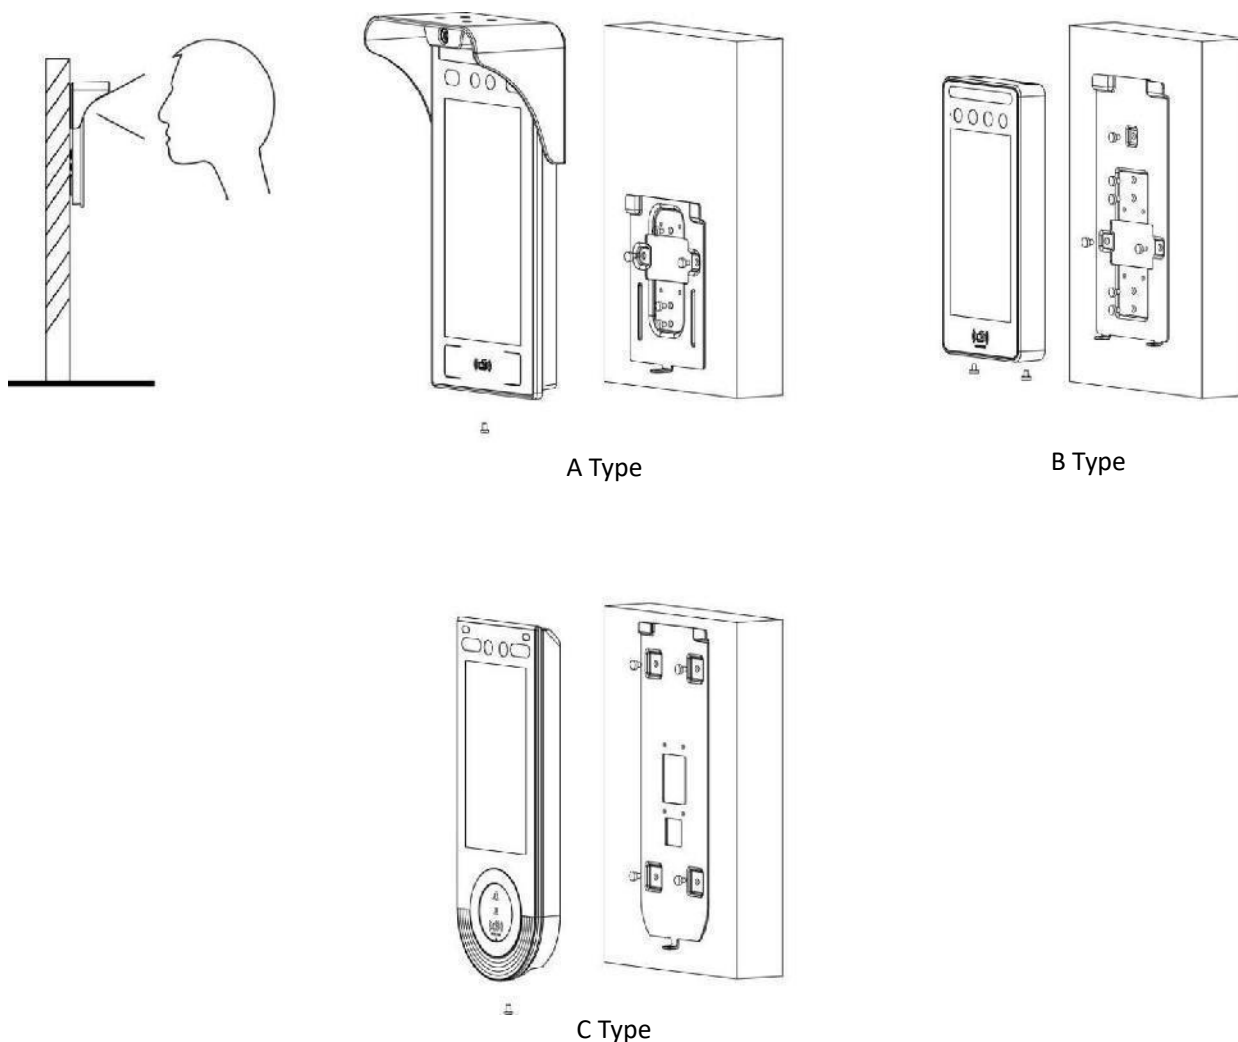

Installation Diagram

Step 1: Remove the screw nuts at the bottom of the device and remove the metal fixing plate.


Step 2: Drill holes on the wall based on the hole position of the fixed plate, and fix the fixed plate to the wall using expansion bolts (it is recommended to install at the same height as the screen and face for easy identification). After the installation of the fixed plate, ensure that the hanging plate is stable, firm, and free from looseness.

Step 3: Connect the wires according to the wiring instructions.

Step 4: Hook the facial palm vein machine onto the mounting plate from top to bottom, and use an Allen wrench to tighten the fixing screws at the bottom to complete the installation.

● Please refer to Appendix 1 for installation precautions

3.2 Installed on Turnstile

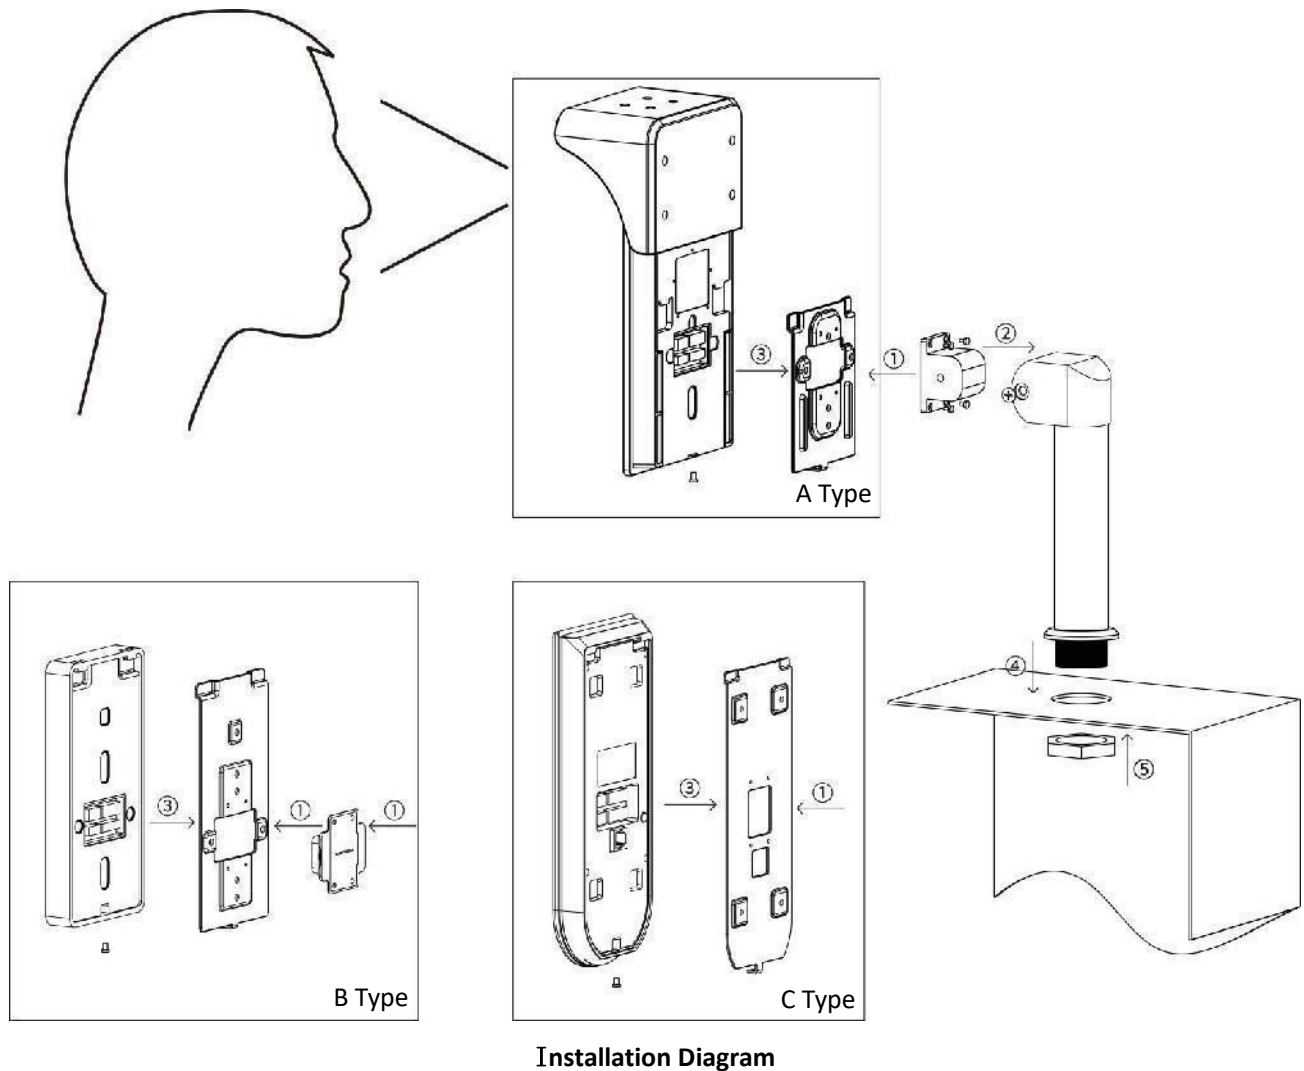

Installation Diagram

Step 1: Remove the fixing screws at the bottom of the device and the top of the bracket, and remove the metal fixing plate and the top accessories of the bracket. Fix the metal fixing plate and bracket accessories together with screws (B model requires silicone parts to be placed before fixing the accessories at the top of the bracket).


Step 2: Connect the wires according to the wiring standards. Thread the wire through the top accessory of the bracket and then into the pillar, and tighten the top of the bracket with screws.

Step 3: Hang the face terminal from top to bottom on the installation hanging board, align the lens with the direction of the face, and use an Allen wrench to tighten the fixing screws at the bottom. After installation, ensure that the rear hanging board is stable, firm, and free from looseness.

Step 4: Install the bracket into the turnstile.

Step 5: Tighten with screws to ensure stability and avoid getting wet.

- Installation precautions are detailed in Appendix 1

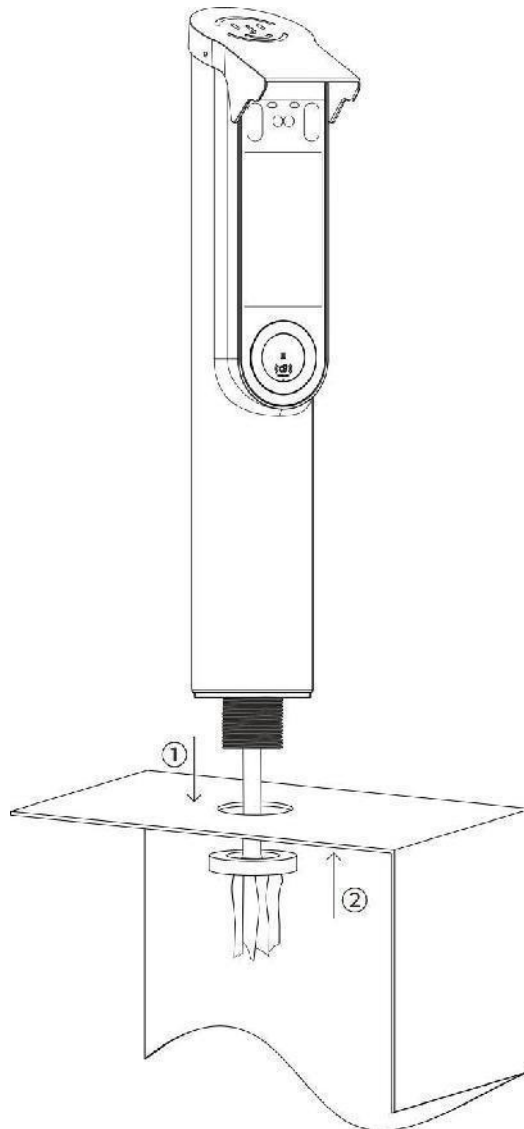


Installation Diagram

- Step 1:** Remove the screw nut at the bottom of the D-type device, thread the device connection wire through the turnstile gate hole, and insert the device into the column
- Step 2:** Tighten the column with screw nuts to ensure stability and firmness.
- Step 3:** Connect the wires according to the wiring instructions.

- Installation precautions are detailed in Appendix 1

3.3 Installed on Ground

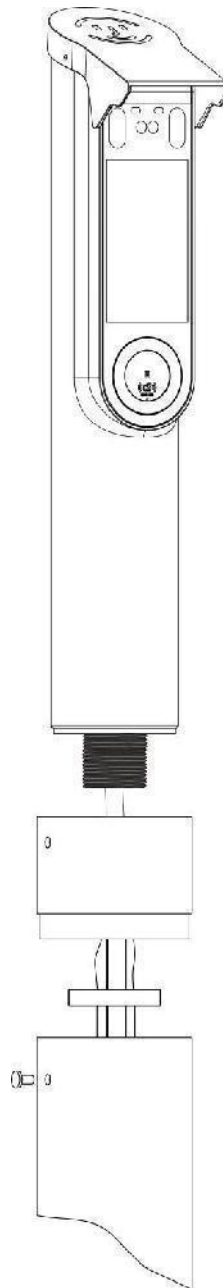

Installation Diagram

Step 1: Remove the screw nut at the bottom of the D-type device, thread the device connection wire through the head of the column, and insert the device into the column.

Step 2: Tighten the screw nut from the inside of the column head to ensure stability.

Step 3: Insert the installed equipment into the column, align it with the hole position and screw in the screws.


● Installation precautions are detailed in Appendix 1

Chapter 4 Wiring Instructions


4.1 Wiring Diagram

Before wiring, it should be ensured that the power supply of the equipment has been disconnected. Connecting the wrong wire while powered on will cause serious damage to the equipment. Please connect the device according to the wiring diagram below, as shown in the following figure.


Wiring diagram for model A

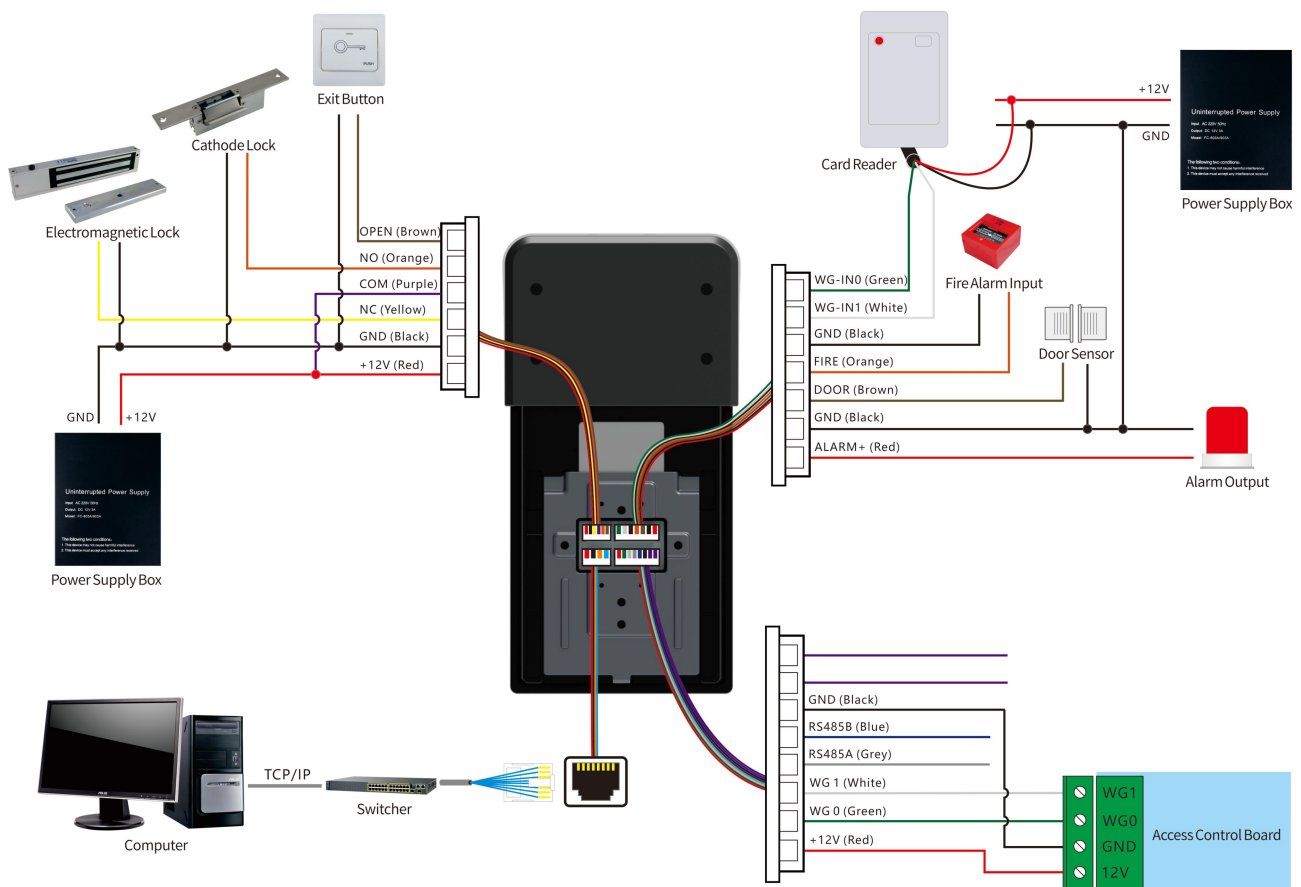


Wiring diagram for model B

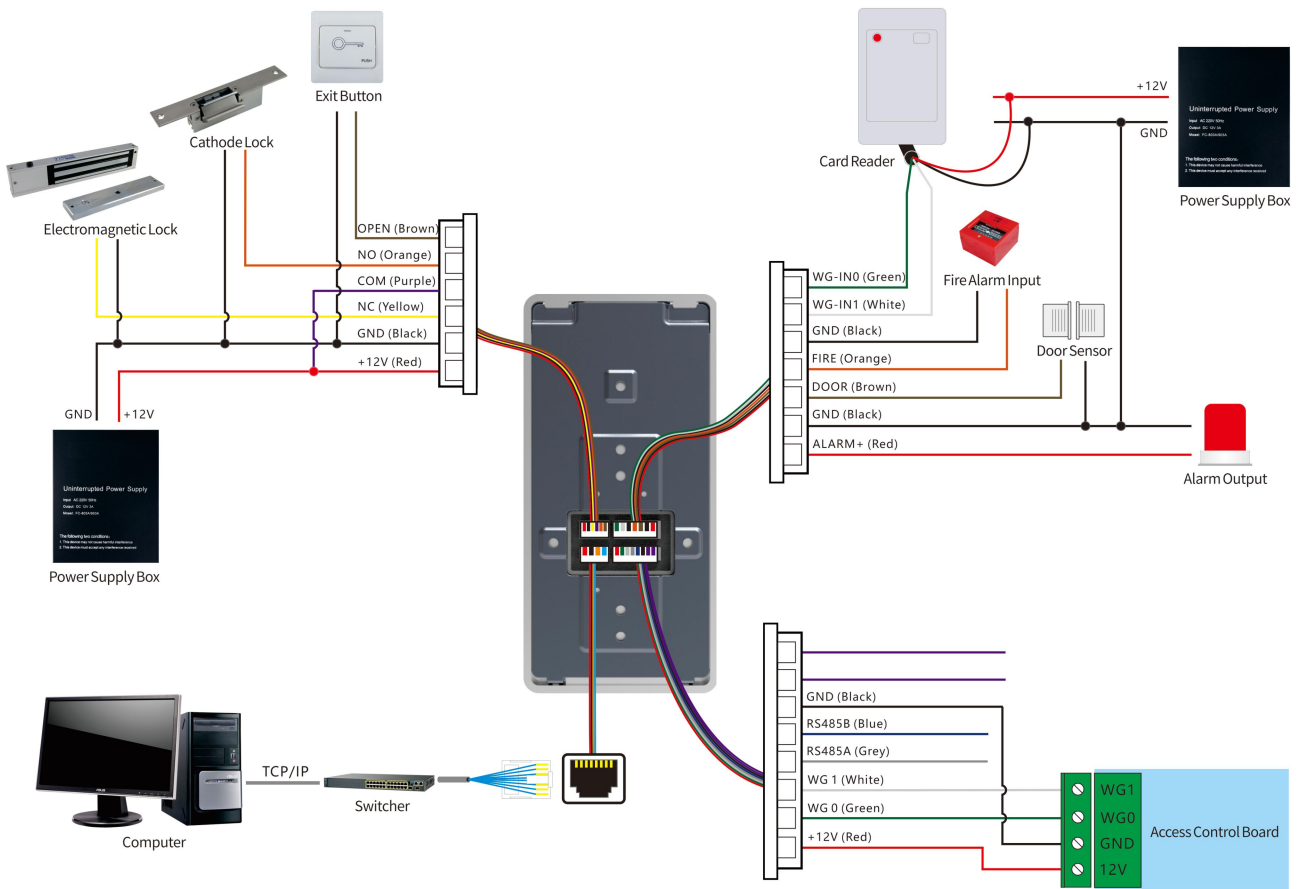

Wiring diagram for model C

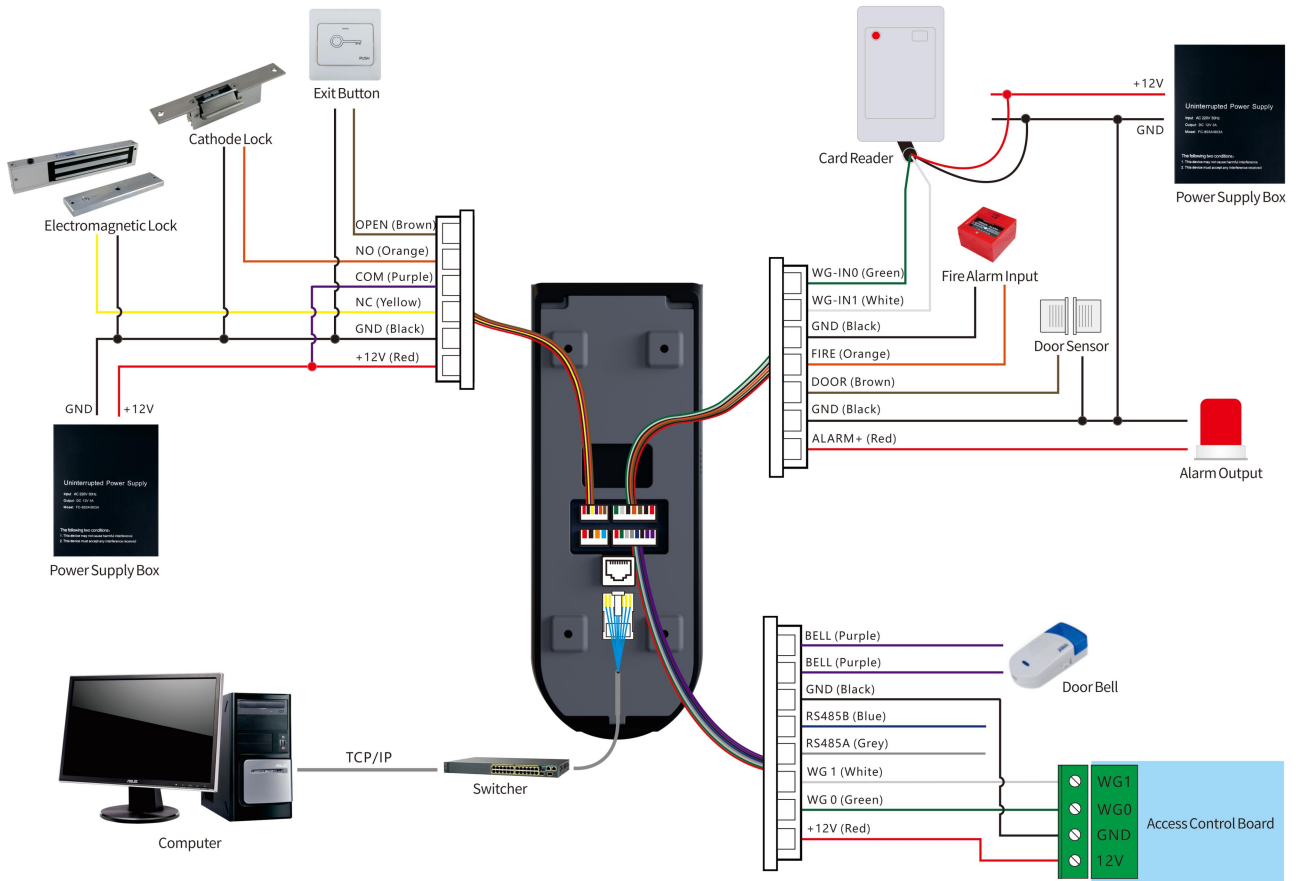

Wiring diagram for model D

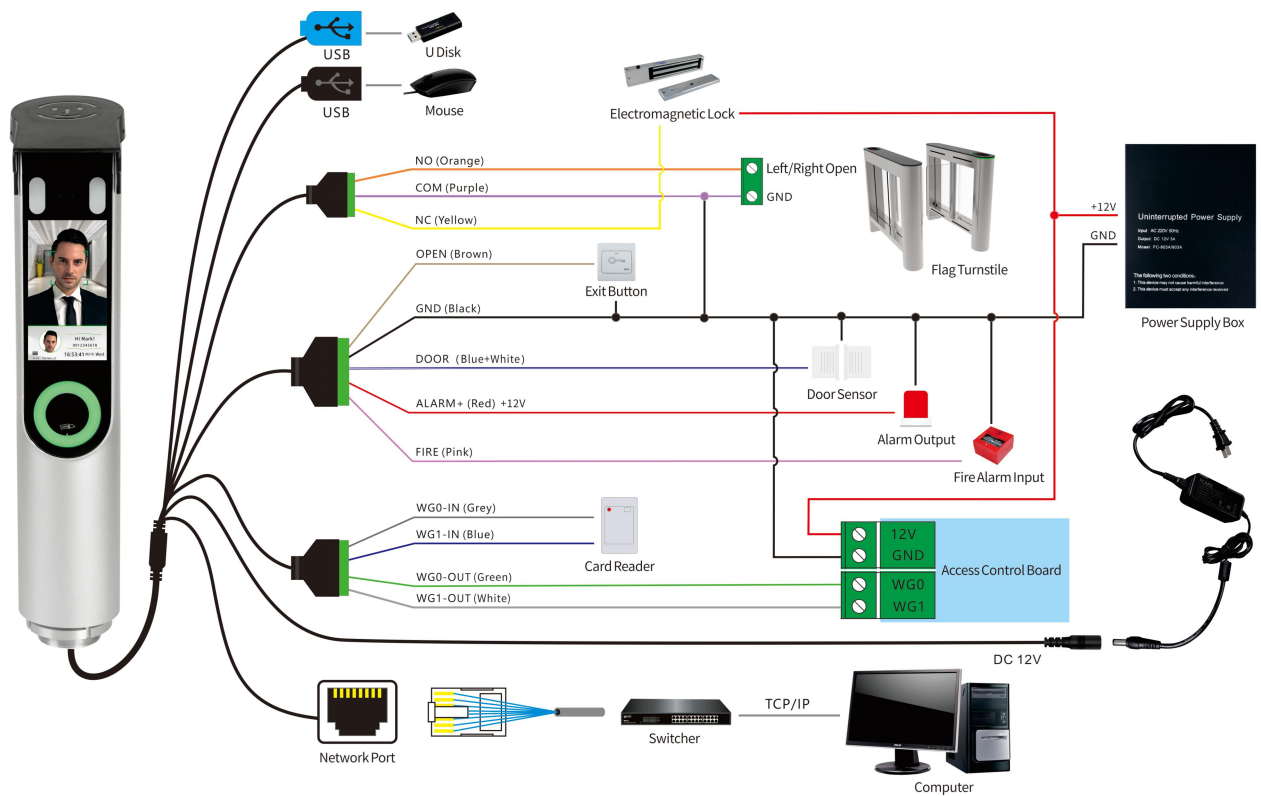


● Wiring Requirements:

- 1) **AC220V AC Power Cable:** Using 3X1.0MM (or above) wire to prevent leakage, and it is recommended to connect the ground wire of the power cable
- 2) **Electric Lock Cable:** Using 2X1.0MM (or above) wire, the maximum length of the cable should not exceed 20 meters.
- 3) **TCP/IP Communication Cable:** Please use standard network cables, and the maximum length of the cable should not exceed 100 meters
- 4) **Door Sensor or Exit Button Cable:** Using 2X0.5MM (or above) wire, the maximum length of the cable should not exceed 100 meters.
- 5) **Wiegand Signal Cable:** Using 4X0.5MM (or above) wire, the maximum length of the line should not exceed 80 meters.

4.2 Wiring Connection


① Connect the electric lock

Wiring of powered off unlocks (such as electric bolt locks or electromagnetic locks): The positive pole of the electric lock is connected to the NC of the facial terminal, the negative pole of the electric lock is connected to the GND of the power supply, and the COM of the facial terminal is connected to the +12V output of the power supply.

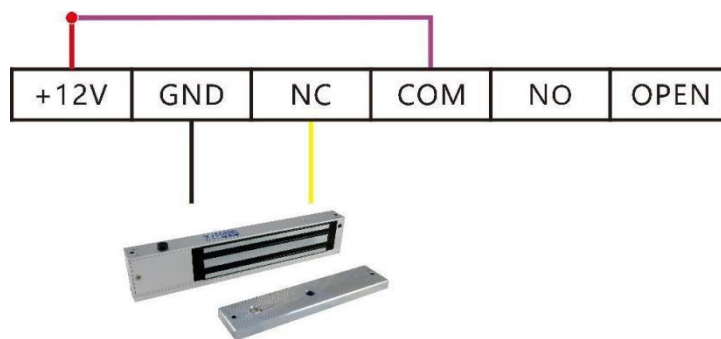


Electromagnetic Lock

A、B、C Model Wiring

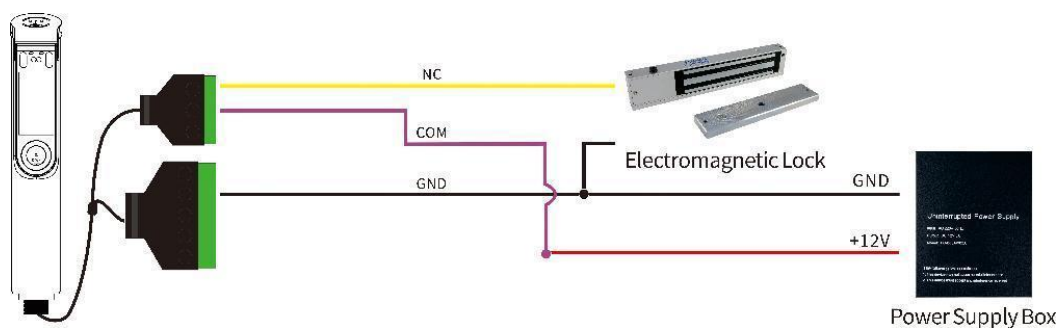


D Model Wiring

Wiring of powered on unlocks (such as electric control locks or electric strike locks): The positive pole of the electric lock is connected to the NO of the facial terminal, the negative pole of the electric lock is connected to the GND of the power supply, and the COM of the facial terminal is connected to the +12V output of the power supply.

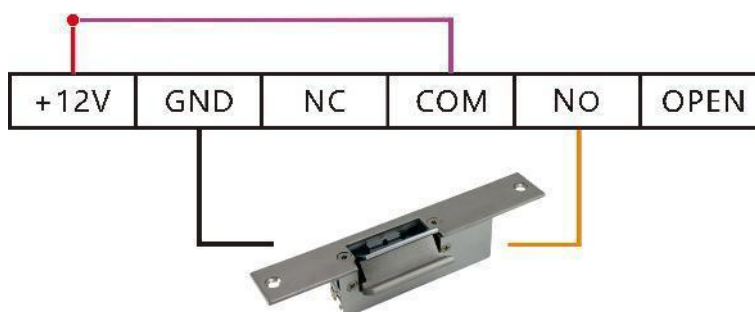


Cathode Lock

A、B、C Model Wiring

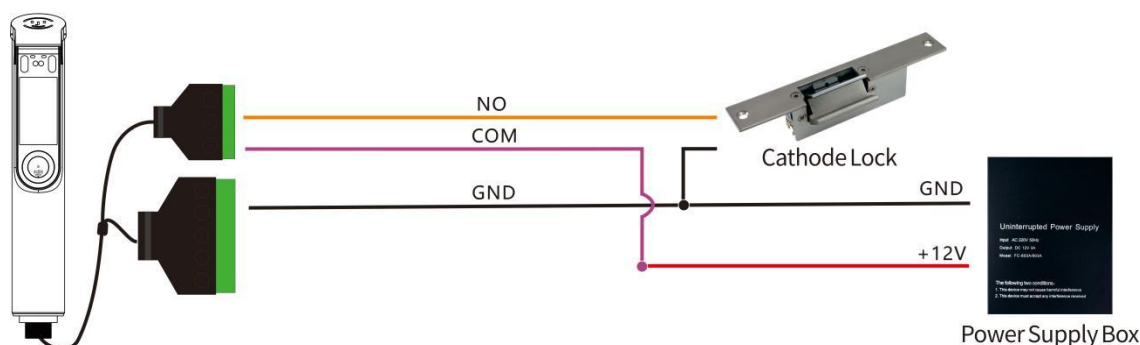


D Model Wiring

Connect the turnstile gates (only D type support): The left or right opening wire of the turnstile is connected to the NO of facial terminal, the negative electrode GND of the turnstile is connected to the COM of facial terminal, and then the COM and GND of facial terminal are connected together.

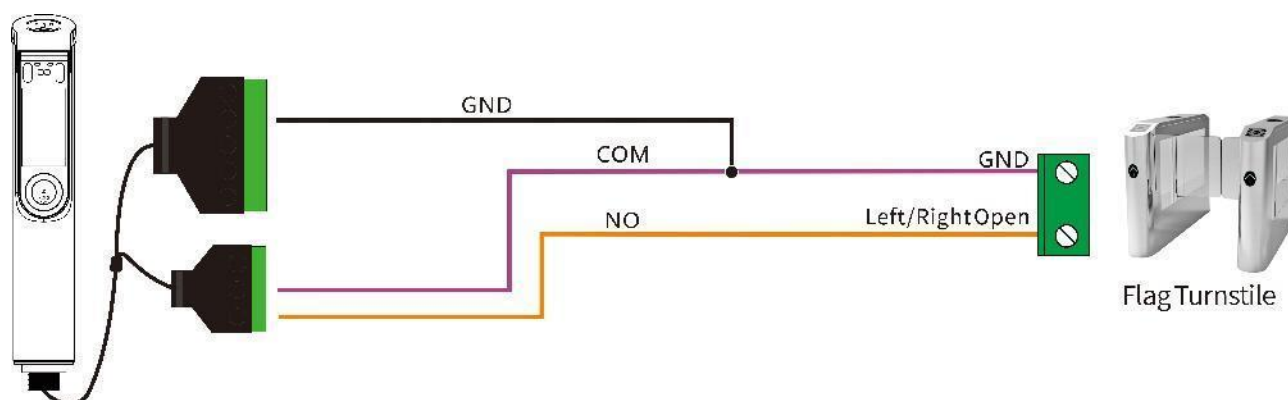


② Connect the exit button

Connect the two wires of the exit button to the OPEN (brown wire) and GND (black wire) corresponding to the facial terminal. The cable length of the exit button should not exceed 100 meters.

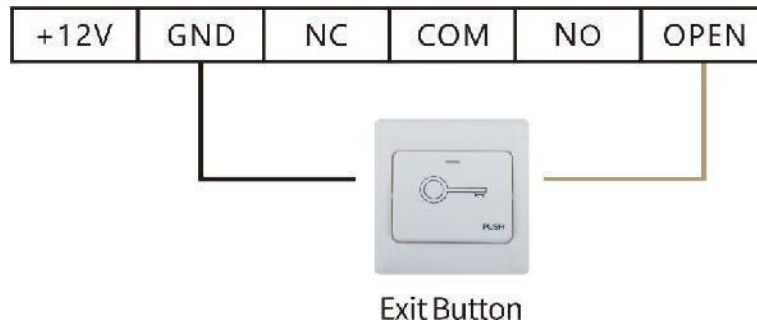


A、B、C Model Wiring

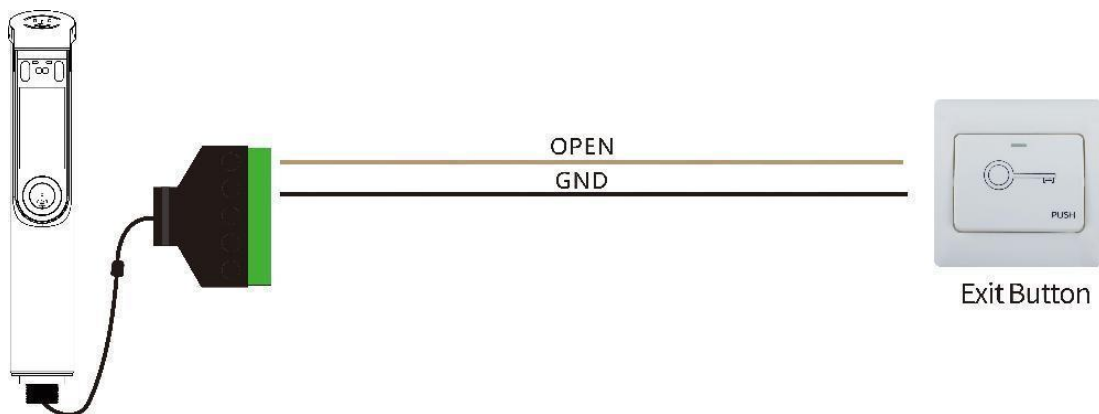


D Model Wiring

③ Connect the Door Sensor

The two wires of the door sensor are connected to the corresponding DOOR (brown wire) and GND (black wire) of the facial terminal. The cable length of the door sensor should not exceed 100 meters.

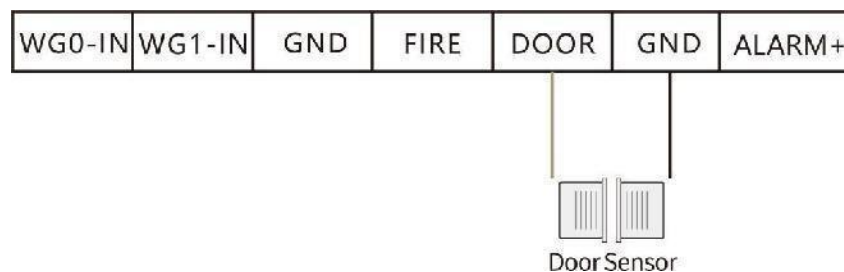


A、B、C Model Wiring

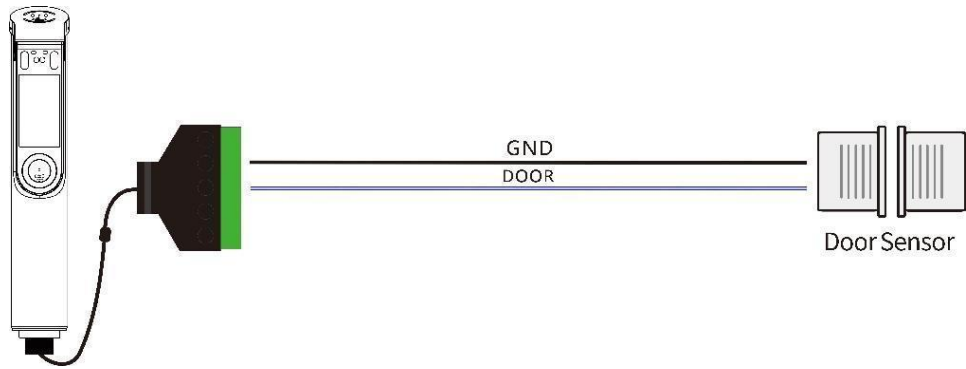


D Model Wiring

④ Connect the Siren

The two wires of the alarm are connected to the corresponding ALARM (red wire) and GND (black wire) of the facial terminal. The cable length of the siren should not exceed 50 meters.

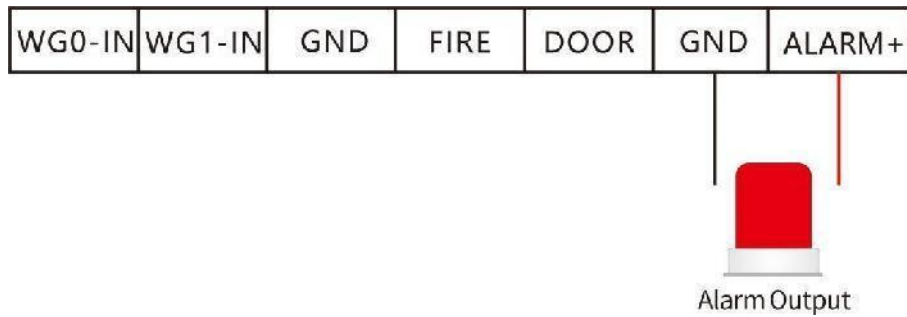


A、B、C Model Wiring

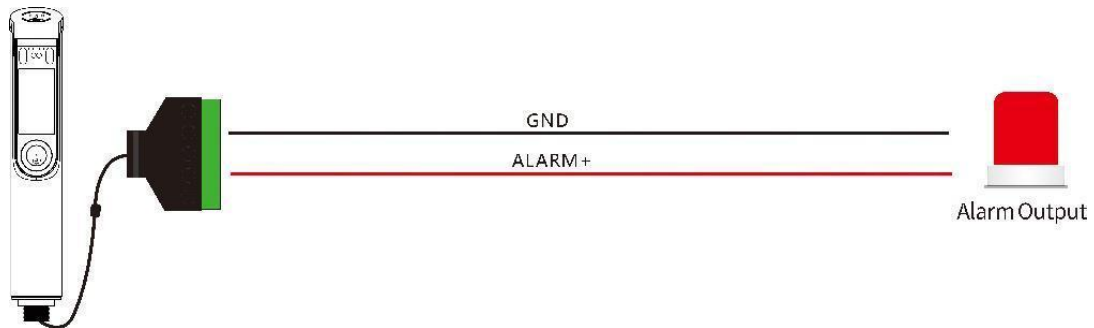


D Model Wiring

⑤ Connect the Fire Alarm Input

The fire input signal is connected to the FIRE (orange line) and GND (black line) corresponding to the facial terminal.

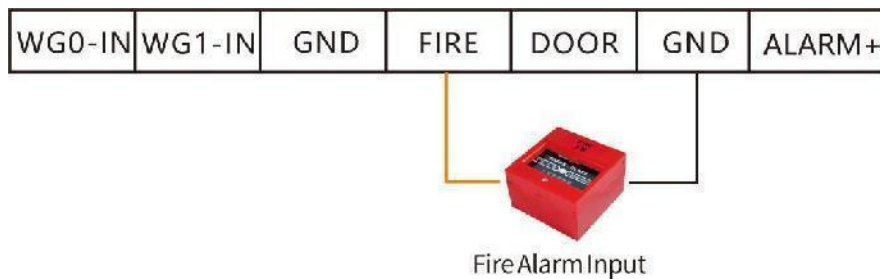


A、B、C Model Wiring

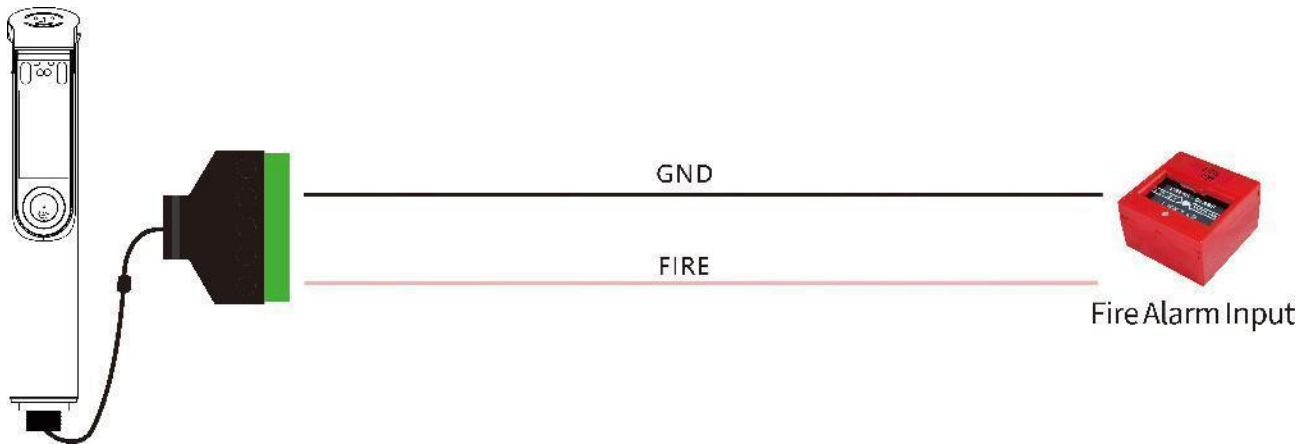

D Model Wiring

⑥ Connect doorbell (only supported for C models):


The signal wire of the external doorbell should be connected to the two BELL ports on the facial terminal.

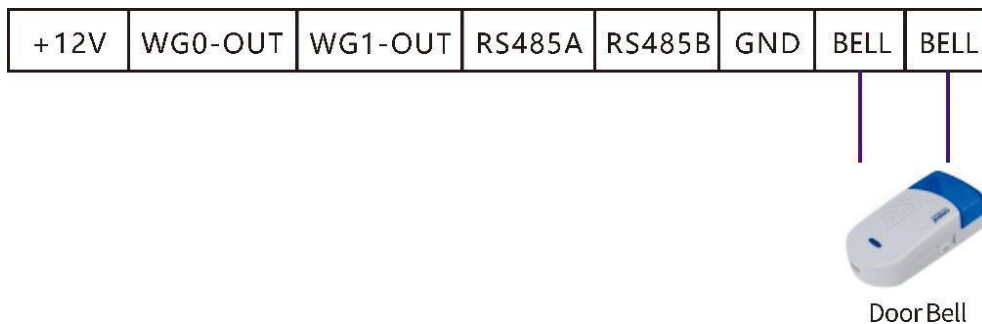


⑦ Connect the access control panel

The facial terminal +12V (red line) is connected to the access control board +12V, the facial terminal WG0 OUT (green line) is connected to the access control board WG0, the facial terminal WG1 OUT (white line) is connected to the access control board WG1, and the facial terminal GND (black line) is connected to the access control board GND. The facial terminal can be used as a Wiegand reader.

- Note: Regardless of whether the facial terminal is powered from the access control board or not, it is necessary to ensure that the facial terminal and access control board are connected to GND together to ensure stable Wiegand signal transmission.

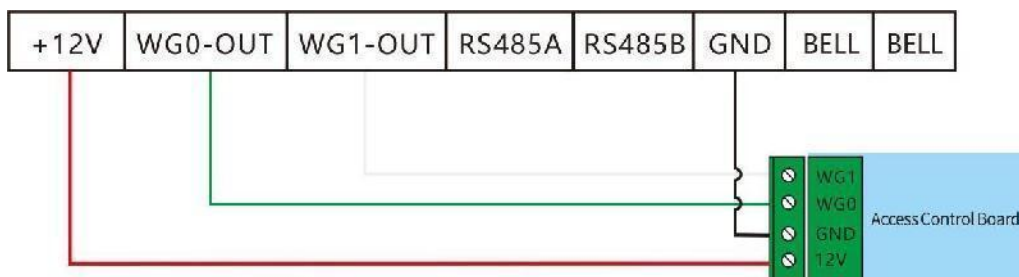


A、B、C Model Wiring

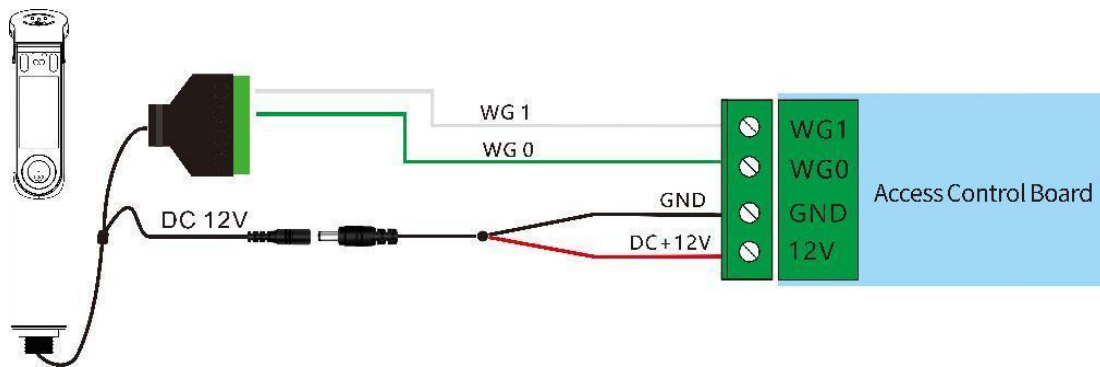


D Model Wiring

⑧Device Networking

The facial terminal can be directly connected to computers or connected through a switcher, the communication distance should be less than 100M.

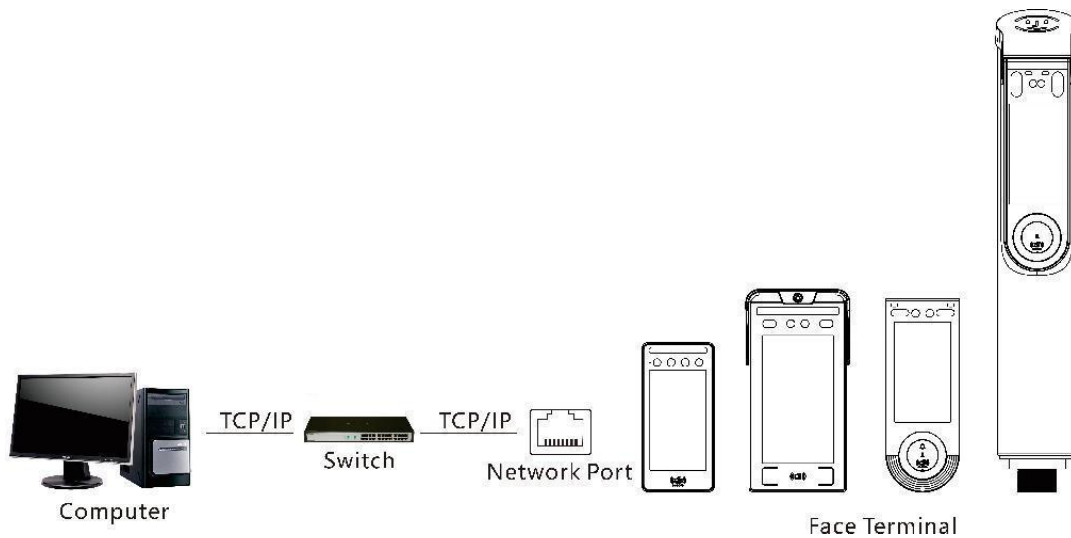


设 Devices and computers are networked through TCP/IP

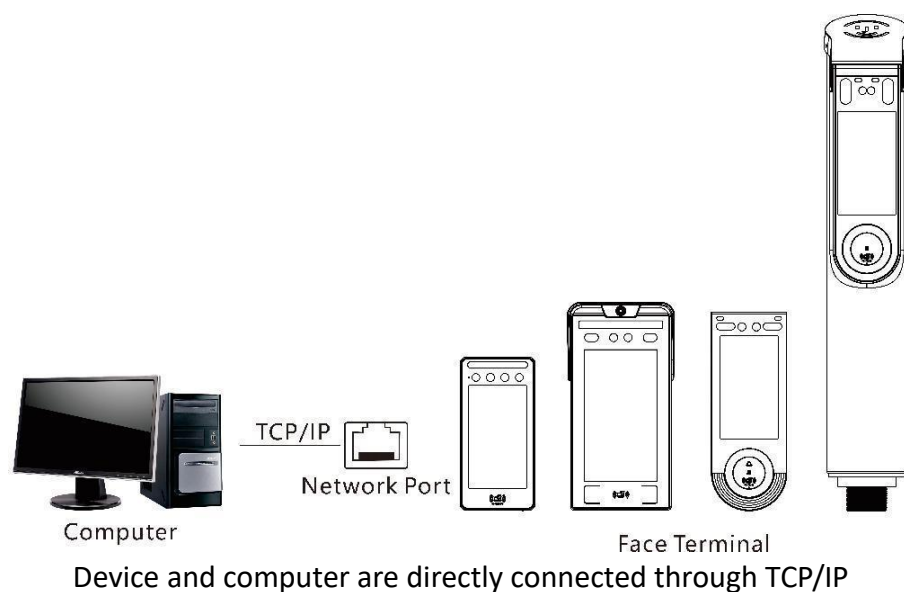


⑨Power Supply Connection

If using DC12V 2A or above power supply, please use RVV2 * 0.75mm or above wire connection.

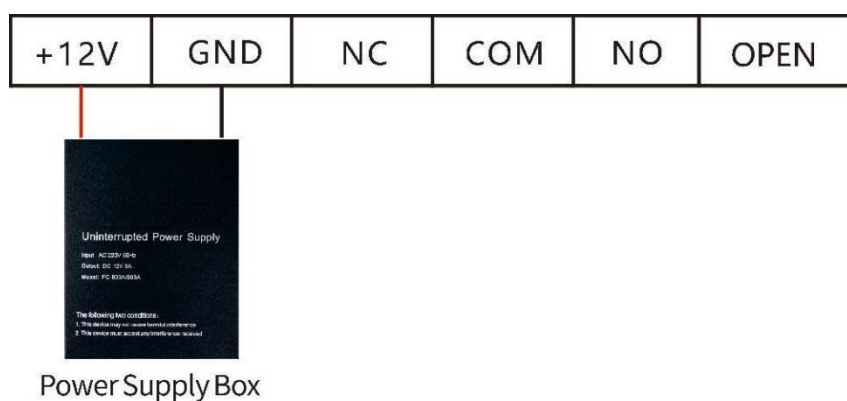

A、B、C Model Wiring

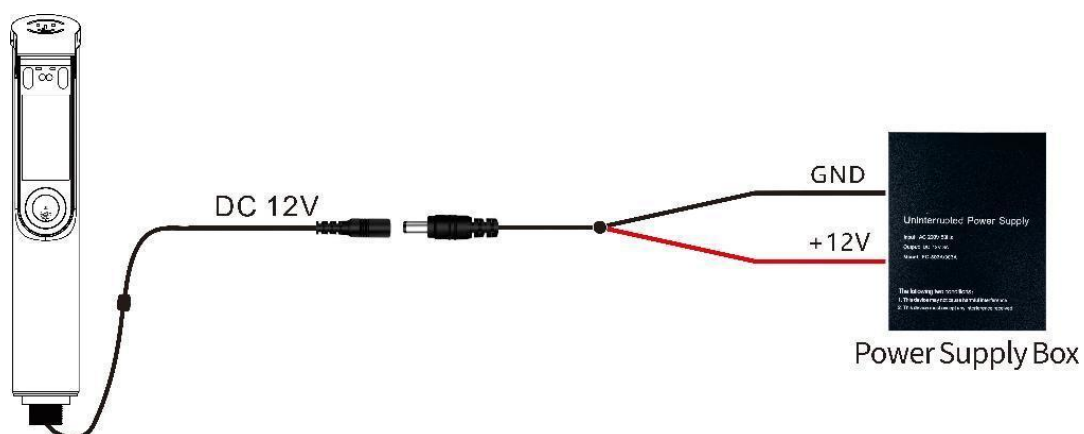


D Model Wiring

Note: The facial terminal adopts a highly sensitive touch sensing element, and the power requirement is that the output noise of the power supply is less than 100mVpp, otherwise there may be problems such as touch screen interference, insensitive touch, and screen bouncing.

Chapter 5 User Operating Instructions

5.1 Main Menu

Click on the "**Firmware Version Area**" in the bottom left corner (as indicated by the arrow on the main interface in the following figure) to switch to the "**Administrator Verification**" interface. Verify according to the administrator's registration way (face/palm vein/fingerprint/Mifare card/password) to enter the facial terminal management menu. (Password registration way, you need to click on the middle of keyboard icon, switch to the "**Administrator Verification**" interface, enter the administrator ID and password, and finally click "**Yes**") to enter the facial terminal management menu. (If no password or administrator is set, the system will not require to input it)

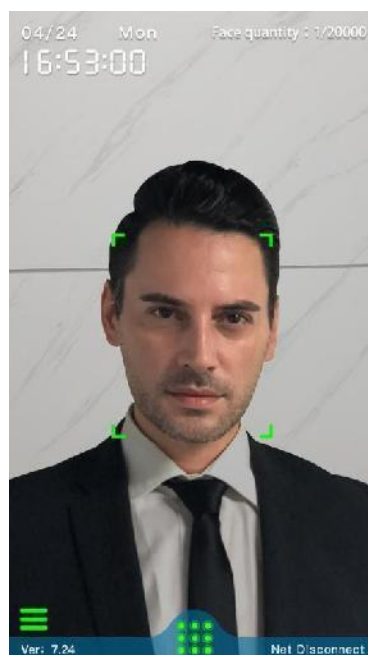


Main interface



Main interface

5.2 User Management


Click on "**User Management**" under the menu to enter the menu status. Under this menu, you can perform operations such as "**Register User**", "**User Browse**", "**Department Settings**", "**Backup User Information**", and "**Restore User Information**".

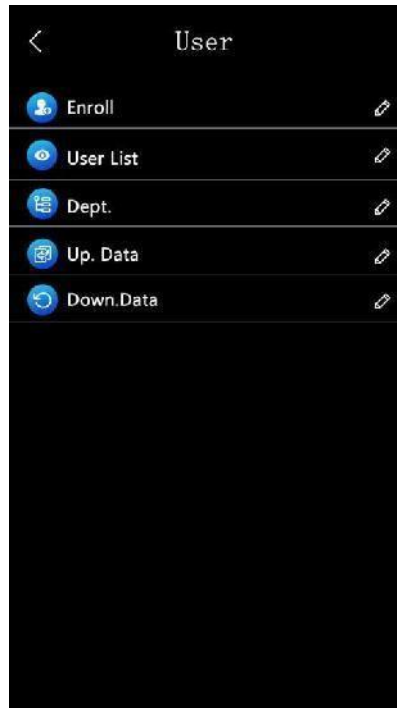

User Management Interface


5.2.1 Registered Users

Click on "**Register User**" to start registering a new user, enter the number and name, and then click on the "**Register User**" button to select the registration type: Register Face, Register Palm Vein, Register Fingerprint, Register Card, and Register Password.

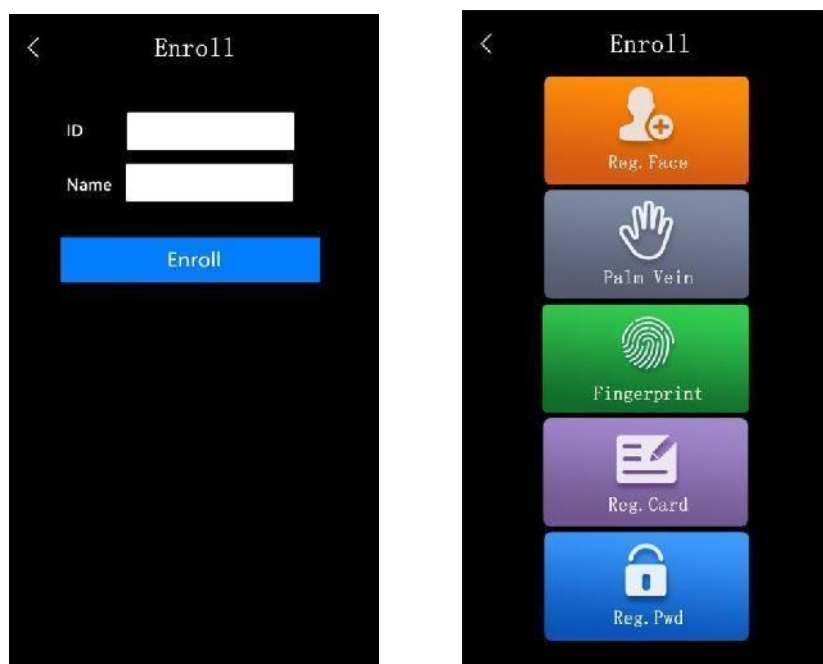

Register User Interface

Select the "Register Face" button and follow the facial machine prompts to look at the camera to register a face, as shown in the following figure:

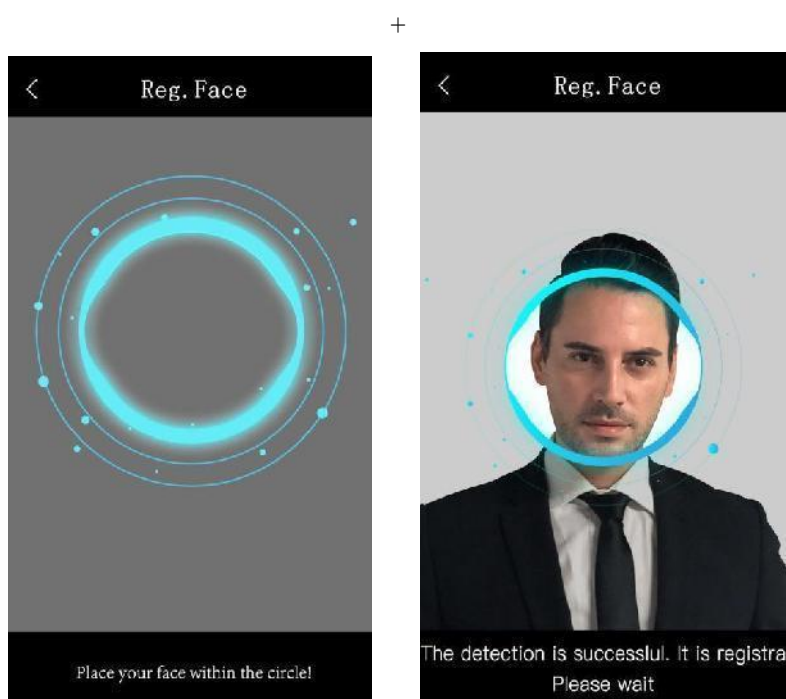


Register Face Interface

When registering a face, it is necessary to pay attention to the screen. To ensure the quality and accuracy of facial parameter input, maintain a natural expression during the input process. Do

not wear hats, glasses, or other accessories that affect facial feature collection. Do not let bangs block facial features or wear heavy makeup.

After register the face and successfully registering, you can continue to choose other registration methods for the device.

Select to register the palm vein, turn your palm towards the camera, move it to the palm vein extraction box on the screen, wait for the palm vein input to be completed, and the device will prompt registration successfully. Click "Yes" to continue registering the palm vein of the other hand, or click "No" to complete the palm vein input. As shown in the following figure:

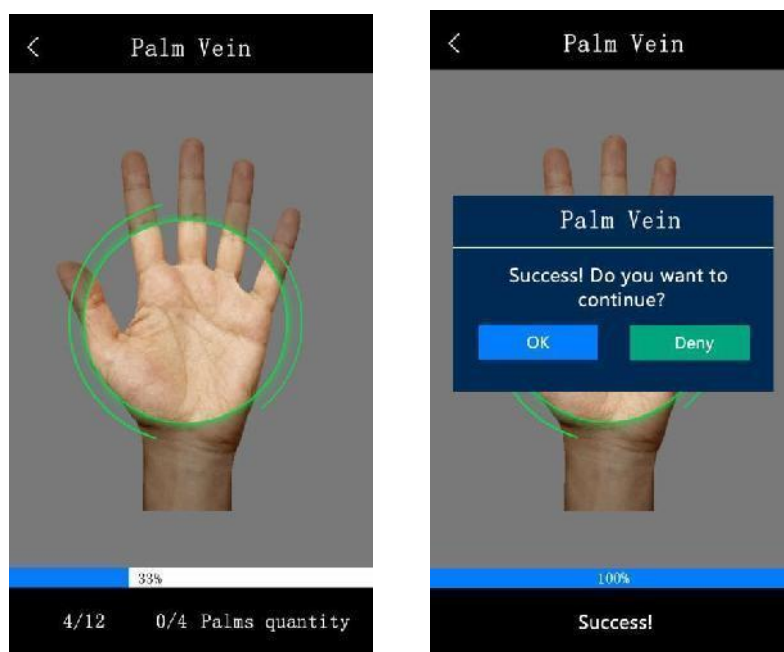


Register Palm Vein Interface

Select the registration card, and the device will prompt you to read the card. At this time, please swipe the card in the card swiping area of the device.

The facial recognition terminal will recognize the card number, as shown in the following figure. Click "Yes" to complete the registration of the card.

o

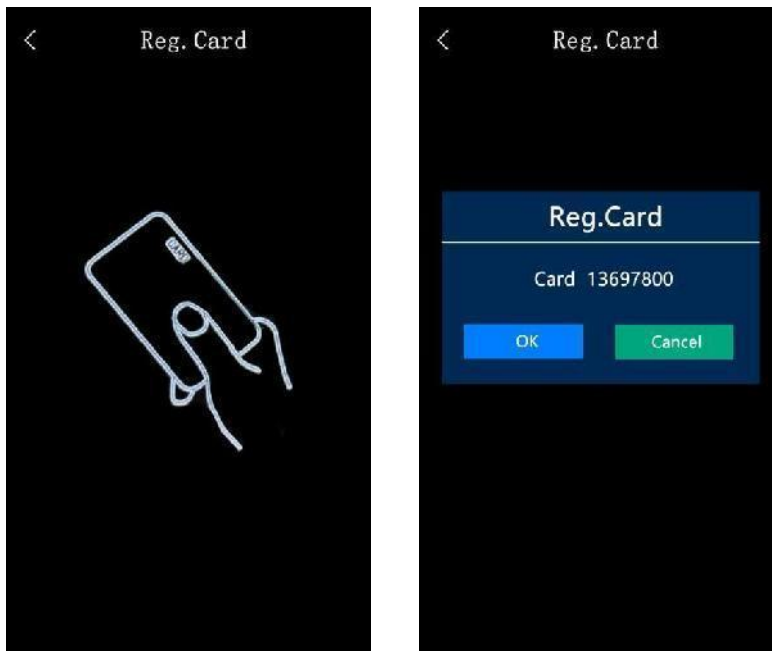

Register Card Interface

Select the registration password, pop up the password input box and numeric keypad, enter the password (password length within 1-8 digits), click "OK", enter it again, confirm the password, click "Yes" to complete password registration, as shown in the following figure:




Register Password Interface

5.2.2 User Browsing

Click "**User Browse**" to check the registered users, which are arranged by default according to

their number size. You can also click on registered users to modify their detailed information. Or can search and display it by flipping the page and clicking on "<" ">" below; and also click below to search for the corresponding registered user by number or name.

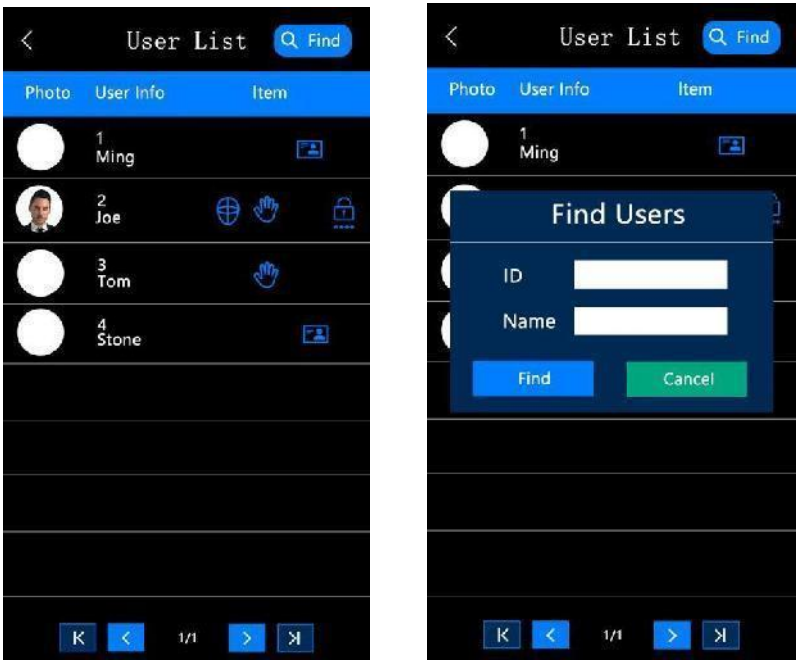

User Browsing Interface


Find the user who needs to be modified, click on the user to view their detailed information. The name, card number, password, department, and permissions of personnel can be modified. For those who have not registered their fingerprint or palm vein, they can click to re-enter the user's fingerprint or palm vein, re record faces or directly delete users. Users can be set as administrators through permission modification.



Modify User Interface

5.2.3 Department Settings

Click on "**Department Settings**" to query or add department information by clicking on the icon in the upper right corner, in order to manage personnel information by department.

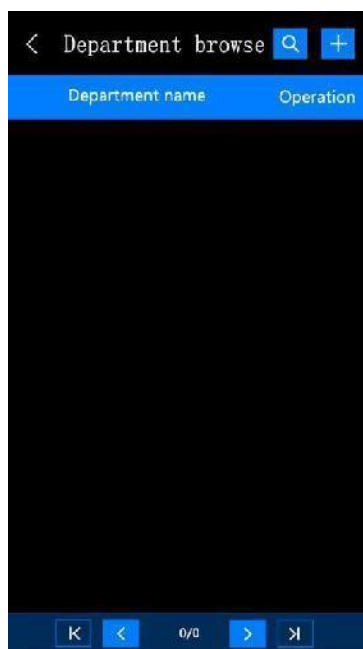

Department Setting Interface

5.2.4 Backup User Information


Click "**Backup User Information**" to back up the registered personnel information to a USB drive for saving.

5.2.5 Restore User Information

Click "**Restore User Information**" to restore the personnel information saved in the USB flash drive to the facial terminal.

5.3 Attendance Rules

Click on "**Attendance Rules**" under the menu. Attendance settings can be set on this menu.

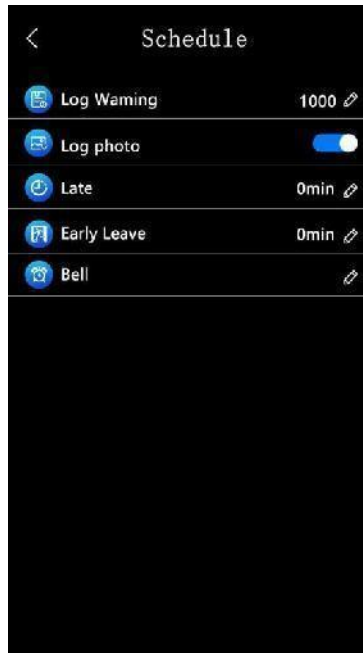

Attendance Rules Interface

Attendance record warning: Before the storage capacity is about to be full, you can set how many remaining record capacities are left, and the device will start alarming (default is 1000 records).

Number of recognized photos: Can be set to save photos taken by the device in real-time when legal verification is passed

You can set the allowed late time and allowed early leave time, max can be set to 120 minutes.

Click on the timed bell setting, total support 24 sets of bell times. Click on the time section in the timed ringer group to modify the specific time for setting the ringer. Click on "**disable**" to set the ringer duration (0 seconds is the default disabled state, with a maximum setting of 255 seconds), as shown in the following figure:



< Bell		
1	00:00	You disabled! ✎
2	00:00	You disabled! ✎
3	00:00	You disabled! ✎
4	00:00	You disabled! ✎
5	00:00	You disabled! ✎
6	00:00	You disabled! ✎
7	00:00	You disabled! ✎
8	00:00	You disabled! ✎
9	00:00	You disabled! ✎
10	00:00	You disabled! ✎
12	00:00	You disabled! ✎
13	00:00	You disabled! ✎

Timed Ringer Interface

5.4 Report Management

Click on "**Report Management**" under the menu to enter the report management menu. The "**Company Name**" display in the attendance report can be modified, and the shift schedule and attendance table can be imported and exported through a USB flash drive.




< Report	
Company	✎
Dwnld Shift	✎
Upd Shift	✎
Dwnld Report	✎
Dwnld File	✎

Report Management Interface


5.5 System Settings

Click on "**System Settings**" under the menu, which includes general settings, advanced settings, recognition settings, and alarm settings.

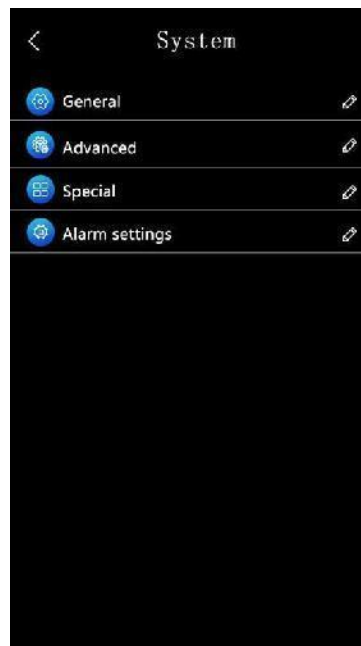

System Setting Interface


5.5.1 General Settings

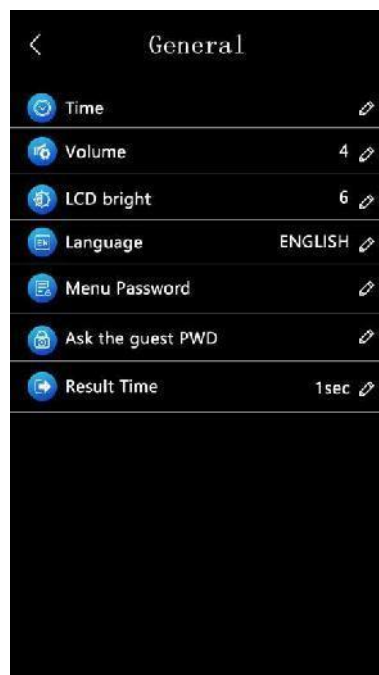

General Setting Interface

The device's clock, sound volume, screen brightness, language, menu password, visitor root password, and interface return time can be set.

The clock can be automatically set for networking or manually, as shown in the following figure.

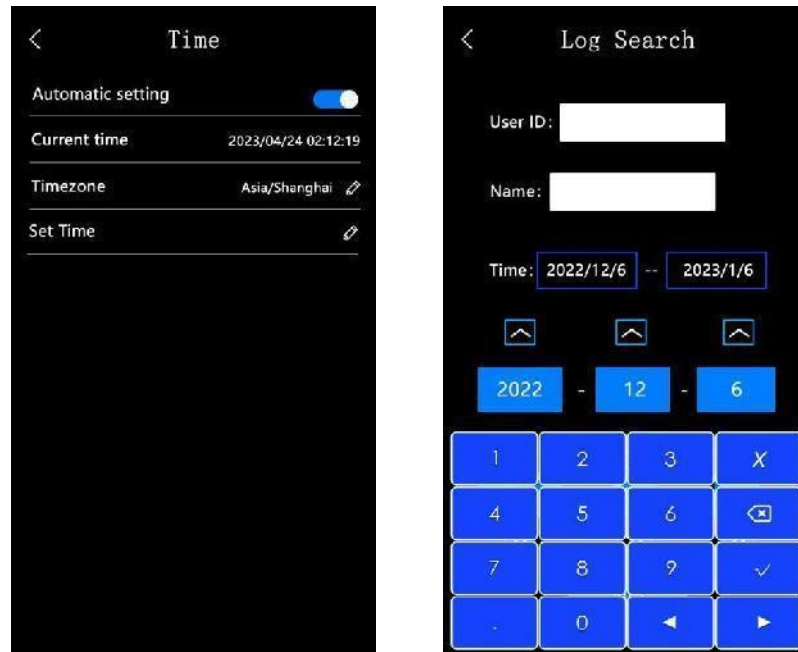

Clock Setting Interface


The sound volume and screen brightness maximum can be adjusted to 10.

Language include Simplified Chinese, Traditional Chinese, English, Portuguese, Spanish, Russian, French, Japanese, Korean, Thai, and Arabic.

The menu password and visitor root password of the device can be set.

The maximum interface return time can be set to 60 seconds (default is 1 second).

5.5.2 Advanced Setting

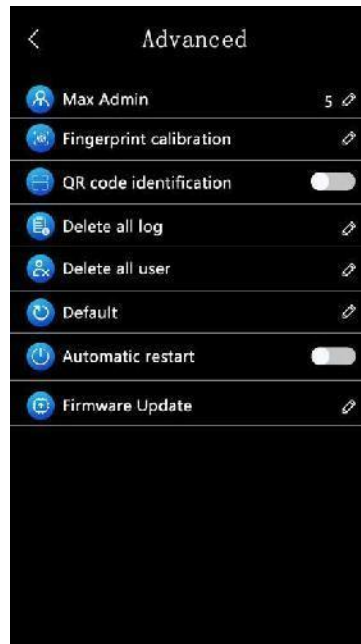

Advanced Setting Interface

The total number of administrators can be set,maximum is 255 administrators

After enabling QR code recognition, you can use the QR code to open the door.

All recorded data and user data in the device can be deleted.

The device can be restored to factory settings.

The automatic restart function can be enabled to set the automatic restart time of the device.

You can upgrade the device firmware through a USB flash drive.

5.5.3 Recognition Settings



Recognition Setting Interface


The device's liveness threshold and recognition threshold can be modified, maximum setting is 99. The higher the threshold, the higher the recognition accuracy, but the higher the requirement for registered photos.

The recognition distance of the device can be adjusted (near, middle, and far).

Liveness detection and infrared image display can be turned on or off.

Supplement Light Mode: The supplement light can be set to three modes: off, always on, and automatic. When set to automatic mode, it will automatically light up when someone recognizes it, and automatically turn off when no one recognizes it.

5.5.4 Alarm Settings

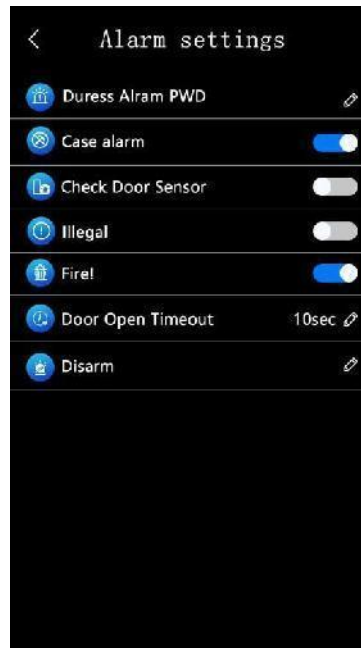

Alarm Setting Interface

The tamper alarm, door sensor alarm, illegal verification alarm, and fire alarm of the device can be turned on or off.

The password of force alarm and door opening of device timeout can be set.

Turn off Alarm: Turn off all alarm prompts.

5.6 Access Control Setting

Click on "**Door Access**" under the menu, as shown in the following figure:



Access control setting interface

Entry and exit mode: Can select entry and exit types are either entry or exit;

The lock hold time can be set from 0 to 65535, (0 represents 0.5 seconds, 65535 represents normally opening after verification)

Bistable state: on/off, (the function of opening the bistable state is to legally recognize once open, then legally recognize once again to close, and switch back and forth to open this function);

Verification Mode: Can be set to standard mode, face+password, card+face, and fingerprint+face according to user needs;

The card reading byte and WG output mode can be modified to Wiegand 26 (two bytes, three bytes), Wiegand 34 (four bytes), and Wiegand 66 (eight bytes);

The output content of WG can be modified to number output or card number output;

Can set the door opening of non-registered verification and verification interval.

5.7 Record Viewing

Click on "**Record Viewing**" under the menu. Click on "Search" and enter the number and name to search for all entry and exit records of the personnel with this number from the start time to the end time. As shown in the following figure:




Record viewing interface



Attendance Record Search Interface

5.8 Communication


Click on "**Communication Settings**" to enter the communication settings menu. The device port, password, server settings, wired settings, and wireless settings can be modified, as shown in the following figure:

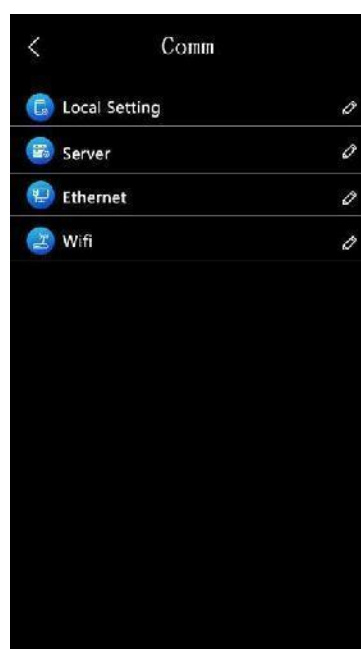

Communication Settings Interface

Port/Password: You can modify the device's port number (default is 8101), communication password, and enable or disable the main interface display IP address function, as shown in the

following figure:

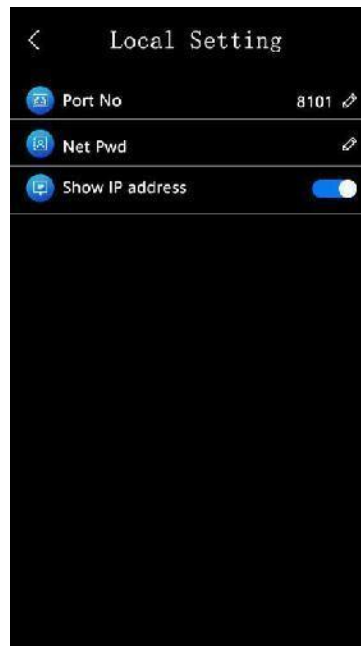

Port Password Interface

Server Settings: When installing this device through our desktop software and selecting real-time monitoring of this device, the software will automatically fill in the settings here, as shown in the following figure:



Server Settings Interface

Wired Settings: The TCP/IP parameters of the machine can be modified. As shown in the following figure:



Wired Settings Interface

The default IP address is 192.168.1.150;


The subnet mask defaults to 255.255.255.000

The default gateway is 192.168.1.1;

The DNS server IP defaults to 192.168.1.1;

The MAC address is fixed and unique.

Wireless Settings: You can enable the search to connect to the network, select the wireless network you want to connect to, and click to enter the password to complete the WIFI connection, as shown in the following figure:

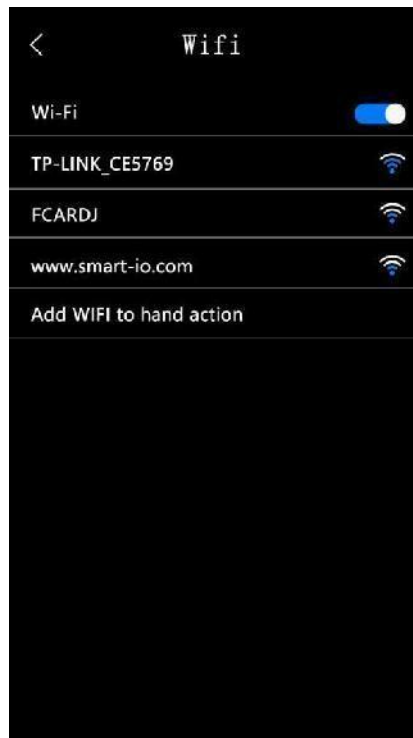


WIFI Setting Interface

5.9 Device Information

Click on "**Device Information**" under the menu to query the registration information and device information

The registration information includes: number of administrators, number of user registrations, number of facial registrations, number of fingerprint registrations, number of palm vein registrations, number of Mifare card registrations, number of password registrations, number of attendance logs, and number of identification photos. The number on the left represents the amount of information already in the device, while the number on the right represents the maximum capacity of device registration information, as shown in the following figure:

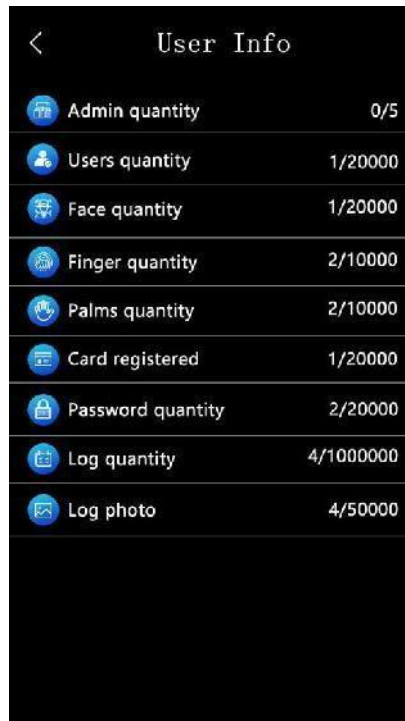

User Info	
Admin quantity	0/5
Users quantity	1/20000
Face quantity	1/20000
Finger quantity	2/10000
Palms quantity	2/10000
Card registered	1/20000
Password quantity	2/20000
Log quantity	4/1000000
Log photo	4/50000

Registration Information Interface

The device information includes: manufacturer, website address, reminder information, serial number, factory date, device name, firmware version, algorithm version, and other information. As shown in the following figure:



Device	
Manufacture	
Web Site	
Reminder	
SN Serial Num	8255H66244654
Released	2023/04/14 16:45:15
Model	
Firmware	7.24
Engine	Ver600.5000.001
Import language(test)	

Device Information Interface

Chapter 6 Instructions for using the client


6.1 Facial machine installation and settings

By using software to automatically search for devices, all online access controller and facial recognition terminals can be automatically discovered, making it convenient for devices to join the software system. Click on “**Automatic Search**” from the 'Install Device' drop-down menu on the main interface, as shown in the following figure


:



Click on “**Automatic Search**” to enter the interface shown in the following figure:

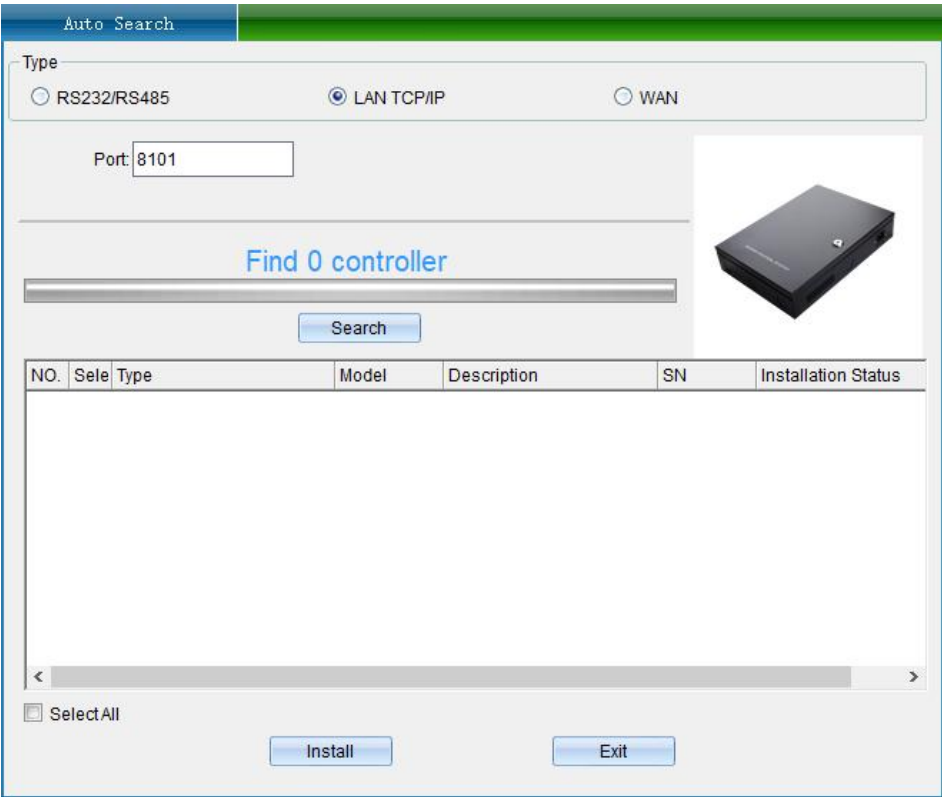

TCP/IP LAN Mode: First enter the network port, which defaults is **8101**, and then click **[Start Search]**. (Note: The device must communicate with the computer through a switch), as shown in the following figure:

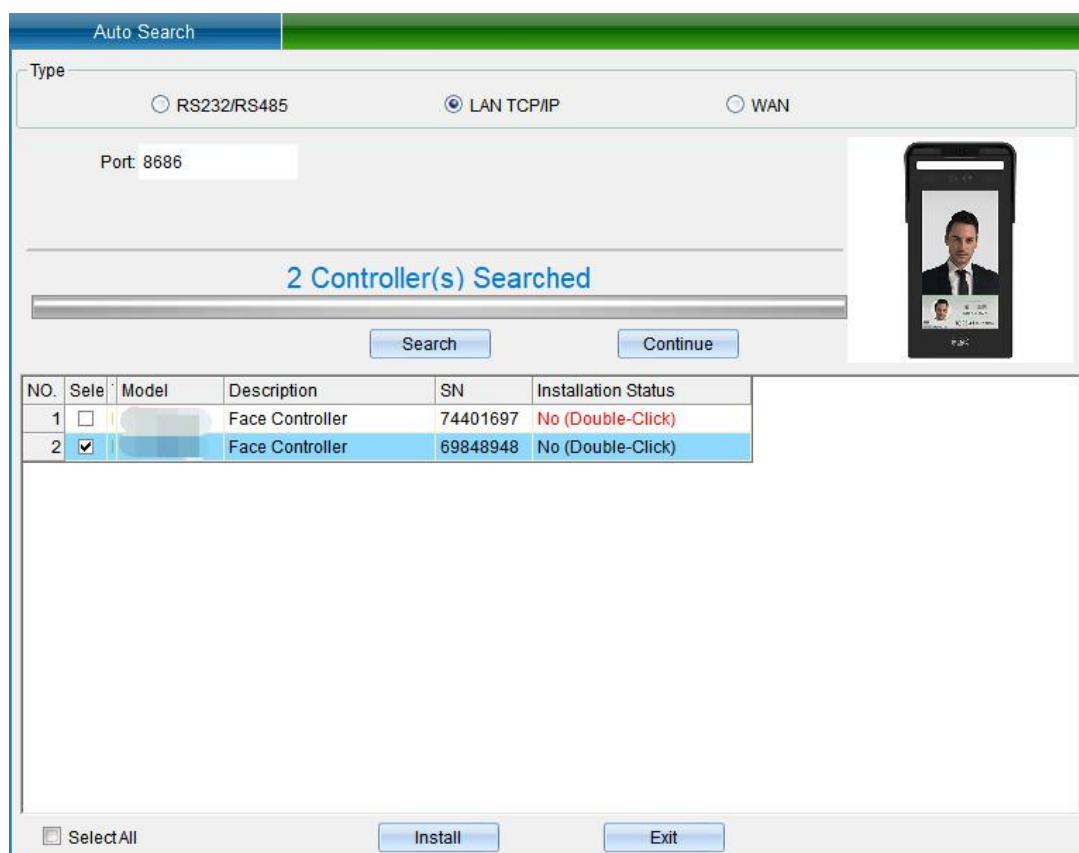

If the user's device uses TCP/IP communication mode, the device IP address needs to be modified. (When installing the device, the user needs to modify the device IP address and check the device communication password. If device has already changed the communication password, the correct password needs to be entered to allow the IP address to be modified, to prevent others from modifying the device IP through installation software and causing the original user to not communicate.) You can double-click the facial recognition terminal searched and the TCP connection parameter interface will pop up:

The image shows a software window titled "IP Address" with a green header bar. Inside the window is a table with three columns: "NO.", "IP Property", and "Value". The table contains six rows of network configuration data. Below the table are three buttons: "Default", "Save", and "Exit".

NO.	IP Property	Value
1	MAC:	2C-88-20-08-60-95
2	IP Address:	192.168.1.151
3	Subnet Mask:	255.255.255.0
4	Default Gateway:	192.168.1.1
5	TCP Port:	0
6	UDP Port:	8101

Default Save Exit

(Note: This system can search for facial recognition terminal in different network segments from this computer. Before normal communication, the user needs to modify the IP address to the same network segment address as the computer. If the router used by the user supports multi segment mapping function, then the system software can directly communicate with access controllers in other network segments.).

Double click the IP address, subnet mask, and gateway address to change them to the parameters matching the same network segment as the computer IP, click **"Save"** to return to the installation interface, click **"Install Equipment"**, click **"Door Access Control"** on the left column after installation, select the equipment, and click **"Properties"** to pop up the following figure:

Details

Basic Info

Setting

Face Recognition

Communication

Administrator

Wiring Diagram

Name: 23050601 - 1

☒ Display on Screen

SN:

Version: 7.25

Description:

Remark:

Location: [Default]

Picture

Select

Fingerprint Version:	Ver 01.00	Factory Date:	2023/05/08
Fingerprint Capacity:	-	User Capacity:	0\20000
Face Store:	0\20000	Palm Vein Store:	
Access Capacity:	0\65792	System Capacity:	0\167772160

Release Time(s): 3 s

(Range:0.5-65535s)

Download

Alarm Status

No Alarm

Remove

Initialization

Initialization will empty all data!

Initialization

Cancel

Save

Exit

Name: Can be modified according to needs

Unlock Holding Time: can be adjusted according to demand (default is 3 seconds)

Select **“Function Settings”** in the **“Device Details”** interface to set the system functions, access control functions, and alarm functions of the facial terminal. System function settings include language, volume, and menu management passwords; The access control function settings include WG output type, card number byte, entry and exit type, and verification interval. The alarm function settings include tamper alarm, illegal verification alarm, fire alarm, and blacklist alarm. As shown in the following figure:

Details

Basic Info **Setting** Face Recognition Communication Administrator Wiring Diagram

System Function Settings

Language: Chinese Volume: 5

Menu Password: 0000

Short Message:

Door Access Settings

WG Output: User No. WG Byte: MSB First

Card Bytes: 3 Bytes(WG26) Entry/Exit: Entry

Verification Interval: Beep Only Interval Time(s): 3 s


Alarm Settings

Tamper Alarm: ON Blacklist Alarm: ON

Illegal Alarm: OFF


Save Exit

Select **“Communication”** in the **“Device Details”** interface, as shown in the following figure:

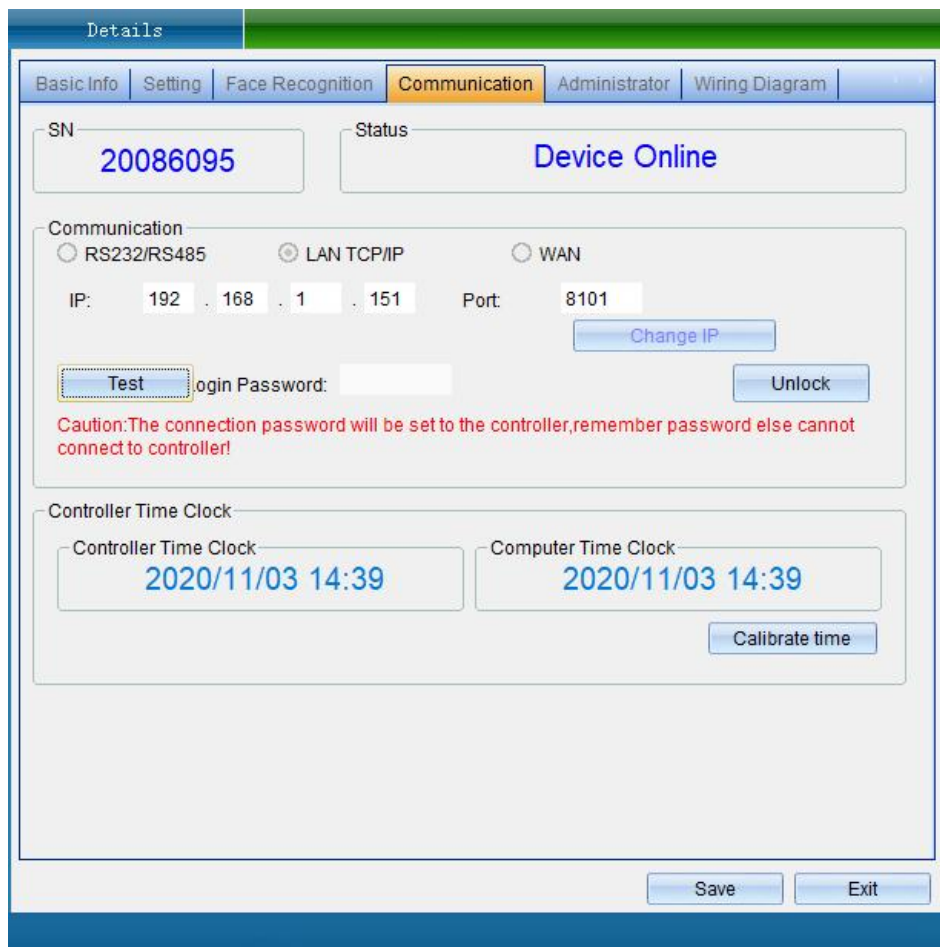


6.2 Adding Face and Authorizing

In [Corporate]-[Card User Database], as shown in the following figure

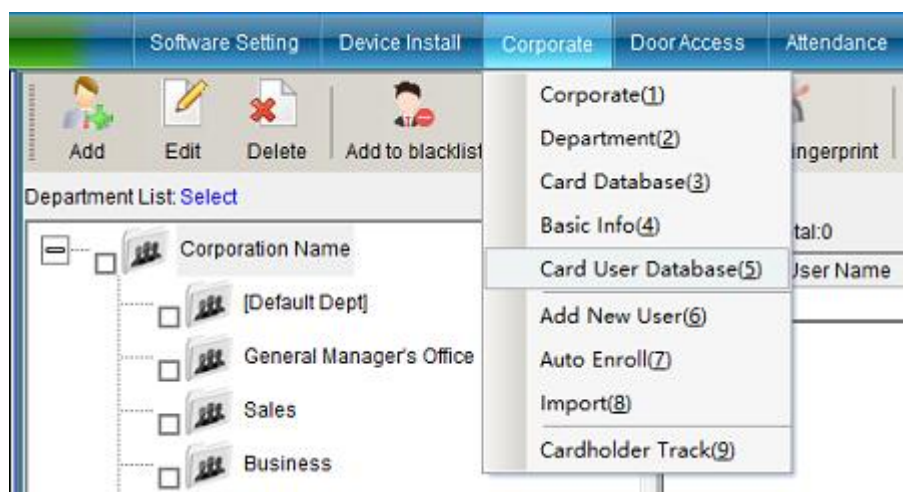

Click the “**Card User Database**”, as shown in the following figure

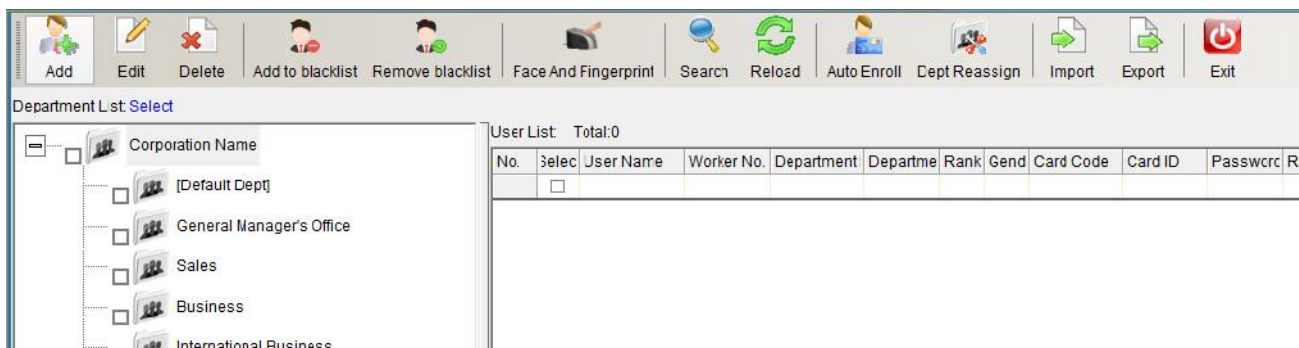


Click **“Add New User”**, as shown in the following figure:

The screenshot shows the 'Edit User---Stephanie' window. The 'Basic Profile' tab is selected, showing fields for Name (Stephanie), Card ID (0), and a 'Select' button. Below these are checkboxes for 'More Formats', 'Fingerprints: 0 pcs', and 'Faces: 0 pcs'. The 'Other Information' section includes fields for Password (masked), Worker No. (10000), Religion (Han Nationality), Gender (Male), Department ([Default Dept]), Dept No. ([Default Dept]), and Rank (Staff). There are also checkboxes for 'Card + PIN' and 'Attendance'. The 'Attendance' section has dropdowns for 'Auto Shift' (Work Normal) and 'Type' (Normal). A 'Picture' section on the right shows a placeholder for a 480 X 640 pixel photo, with buttons for 'Select', 'Delete', 'Take', and 'Take by Face Drive'. At the bottom are buttons for 'Save & Add', 'Save', and 'Exit'.

After filling in the user info, you can click “Select” and add the photo uploaded from the local computer to save as a personal photo. And then click “Save”.

Photos require a resolution of 480 * 640 or above (file size: <300KB), clear and unobstructed facial photos (without glasses, masks, or hats), formal, and naturally expressive color photos.

You can also connect an external camera device (traditional USB computer camera) to take photos directly and save them. Click "Take a Picture" to pop up the following page, and click "Take a Picture" to complete. (Note: The face needs to be aligned with the prompt outline for the photo button to display), as shown in the following figure:

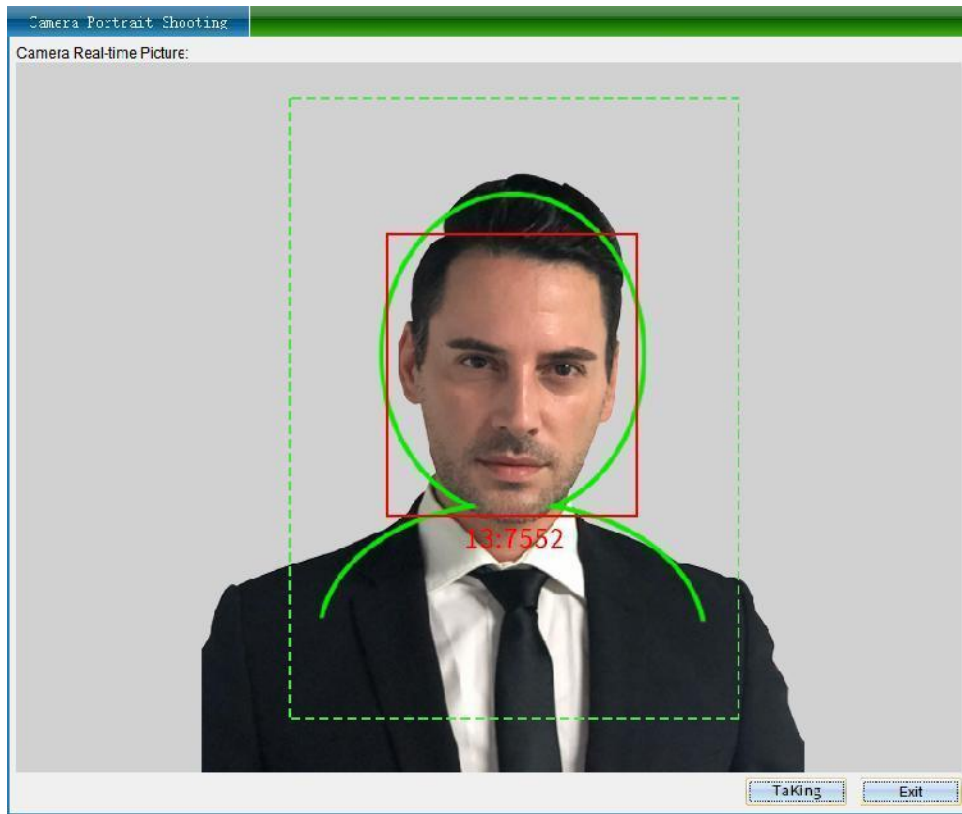

Click on "Use a facial terminal to take photos" and the following page will pop up. Click on "Start taking photos" and enroll the face according to the facial terminal prompts. After clicking on "Save", you will return to the add person information page. Editing the information completely, click "Save" again.

Take Photos By Face Terminal

Device List: 66244654 - 1

Status: Please select the face terminal

User photos:

NO PIC

Take Save Exit

Note: Avoid lighting too bright or too dark when taking photos.

Access Level Setting: click **“Door Access”** - **“Access Level Setting”**, as shown in the following figure:

Access Level Setting

Department: Time Zone: Open Times: ☐ Holiday

Card Type: Expiration: Tip: Open times calculated by controller, card times reduce when any exit/entry happens.

User List: Total: 2

Department	Worker No.	User Name	Card ID
[Default Dept]	10000	Stephanie	0
[Default Dept]	10001	Stephanie	0

Department Worker No. User Name Card ID

Door List: Total: 1

Door	Tag Name
20086095 - 1	[Default]

Door Tag Name

Select personnel to set the access level, select time zone and opening times, expiration date and doors. After selection, click **“Allowed & Upload”**.

- >>
 Select all **“Users”** or select all **“Optional Doors”**- >
 Select single **“User”** or select single **“Optional Door”**- <
 Delete single **“Selected User”** or single **“Selected User”**- <<
 Delete all **“Selected Users”** or all **“Selected Doors”**

【 Delete 】 Delete the specified user access level to the selected door, must be in the synchronization of data upload settings, and deleted access level successfully.

【 Delete & Upload 】 Delete the access level of the user to the selected door and upload it to the controller, and no need to upload to the synchronous data.

【 Allowed 】 Add the specified user to the selected door access level, must be in the synchronization data upload settings, and added access level successfully.

【 Allowed & Uploaded 】 Add the access level of the specified user to the selected door and

upload it to the controller at the same time, and no need to upload to the synchronous data.

After all permissions are set, uploading the information to the facial machine will take effect.

6.3 Record Collection and Viewing

6.3.1 Record Collection

The system has a memory storage function, and each facial terminal can store offline records (even if not connected to the computer, it will automatically store them. Records will never be lost after power off.) Users can choose to extract data to the computer through a USB flash drive.

Click on the "**Door Access**" drop-down "**Download Transaction**" and enter the interface shown in the following figure:

The screenshot shows the main software interface with the 'Door Access' tab selected. The interface includes a menu bar with options like 'Software Setting', 'Device Install', 'Corporate', 'Door Access', 'Attendance', 'Guard Tour', 'Lift', and 'Meeting'. Below the menu bar is a toolbar with icons for 'Search', 'Download', 'Export', 'Print', 'Export photo report', 'Print photo report', and 'Exit'. The main area contains search filters for 'Time Zone' (2023/4/19 to 2023/4/26), 'Tag Name' (All), 'Department' (All), 'Door', 'User', 'Employee ID', and 'Card ID'. At the bottom, there is a 'Report' button and a 'Status Report' tab. A table with columns for 'NO.', 'Card ID', 'User', 'Employee', 'Department', 'Time', 'Door', 'Tag Name', 'Description', 'Entry', and 'Body Temp' is visible.

Click on the collection record icon to enter the interface shown in the following figure:

The screenshot shows the 'Download Transaction' dialog box. It has a title bar with 'Download Transaction'. Inside, there is a 'Controller:' section with 'Select' and 'Select All' buttons, and a 'Repair' button. Below this is a table with two columns: 'Door' and 'Tag Name'. The first row is checked and contains '20086095 - 1' and '[Default]'. At the bottom, there are checkboxes for 'Card Event', 'Button', 'Sensor', 'System', 'Alarm', and 'Soft-Pulse'. The 'Card Event', 'System', and 'Alarm' checkboxes are checked. There are 'Download' and 'Exit' buttons at the bottom right.

After selecting the facial recognition terminal and record type to be collected, click **[Download Transaction]** and a window will pop up as shown in the following figure:

Door	Tag Name	Description	Status
20086095 - 1	[Default]	Card Event	Saved:00005,Downloaded:00005
20086095 - 1	[Default]	System	Saved:00001,Downloaded:00001
20086095 - 1	[Default]	Alarm	Saved:00001,Downloaded:00001
20086095 - 1	[Default]	Read Temp Re...	Saved:00000,Downloaded:00000
20086095 - 1	[Default]	Download reco...	Downloaded,photos:5

Collection completed, click **“Back”**.


If you have already downloaded reading card transaction, you can get all the transaction by **“Repair Transaction”**.

Click **【Door Access】 - 【Download Transaction】 - 【Repair】**, and then pop-up verification window and enter password “0000”(Default Password), as shown in the following figure:


Admin Name: SYSTEM

Password:

OK Exit

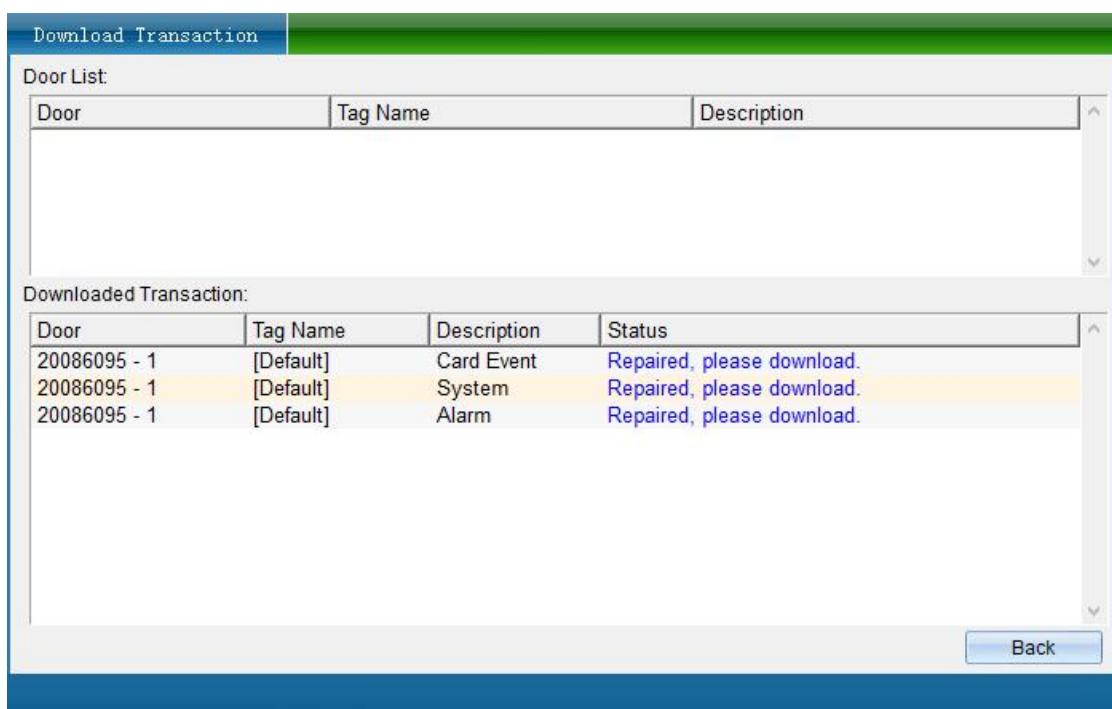

After the repair is completed, click **[Complete]** to return to the collection access control record interface. Select the door to extract the card reading record and the data to be collected, and then click **[Download Transaction]**. After a while, the collection will be completed. At this point, all records in the controller will be collected into the computer, as shown in the following figure:

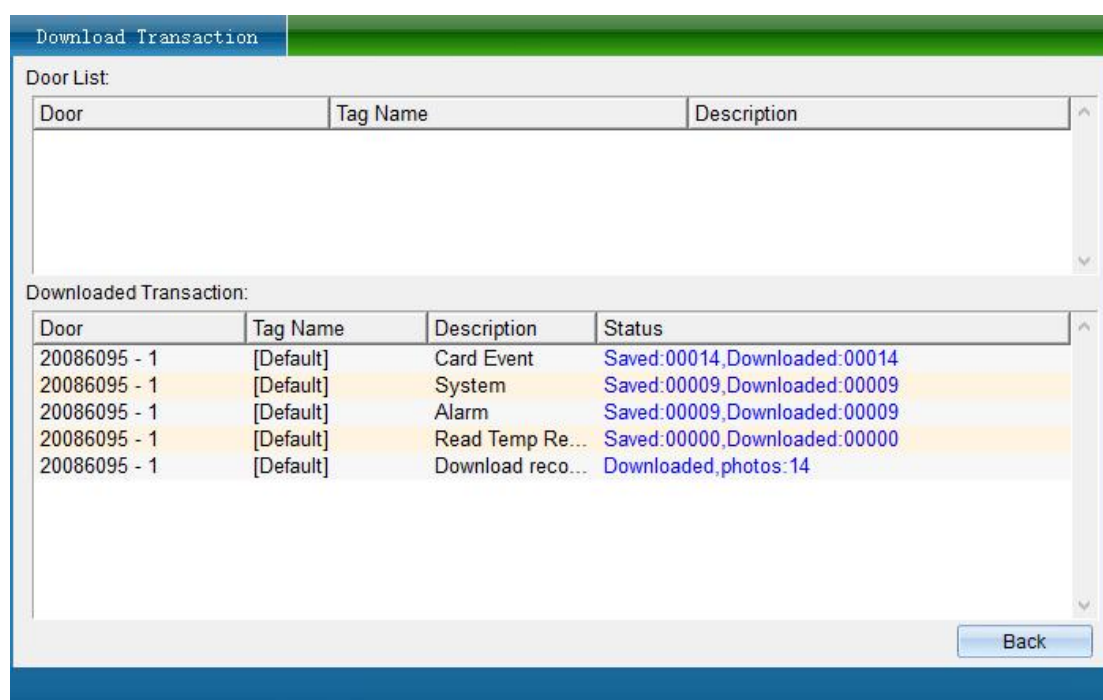


Until the collection is completed and click **[Back]**. After the collection of records is completed, then can query the records.


6.3.2 Record Viewing

Please collect records before query records


Click on the software menu **[Door Access]** drop-down menu **[Query Transaction]**, as shown in the following figure:

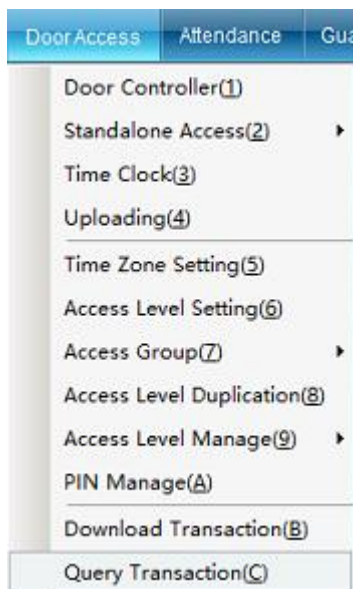

Click on **[Query Transaction]** to enter the interface shown in the following figure:

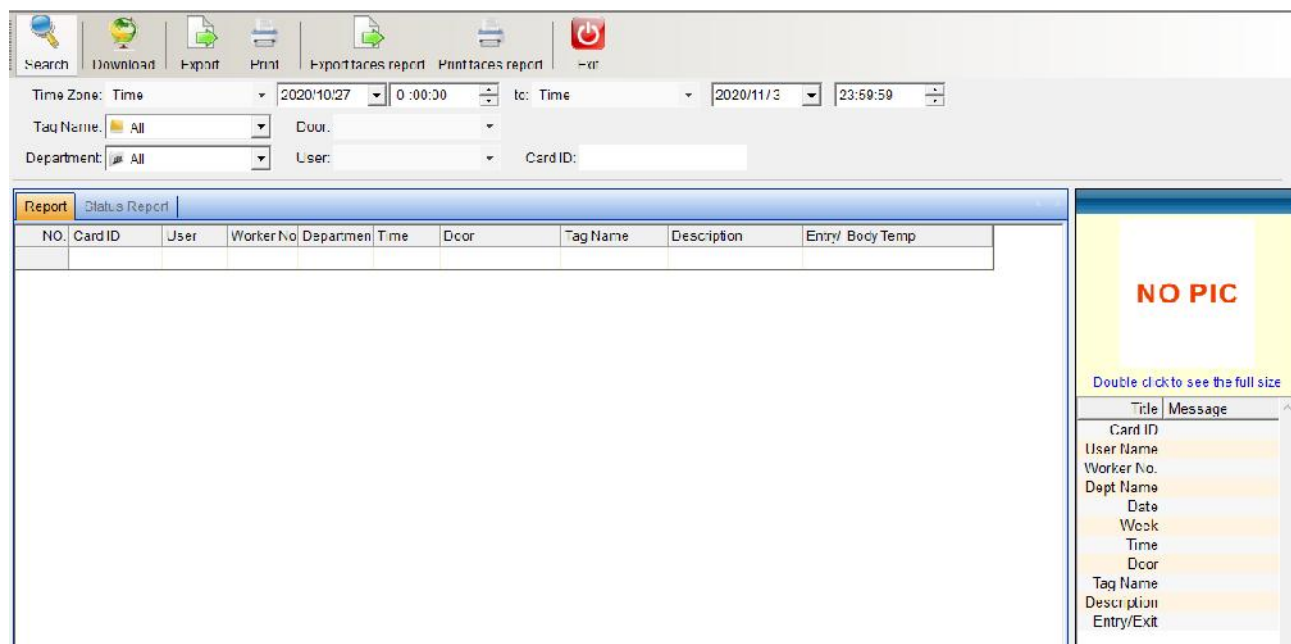

First collect records, click on **"Collect Records"**. After collecting records, you can query them as needed and enter query criteria. The query criteria can be based on **"Time Range"**, **"Name"**, **"Personnel Number"**, **"Card Number"**, **"Department"**, **"Location"** to search for relevant records. Then, click on the **"search"** icon to find the entry and exit records of relevant personnel, or directly click **"search"**, It is possible to query the entry and exit status of everyone, as shown in the following figure:

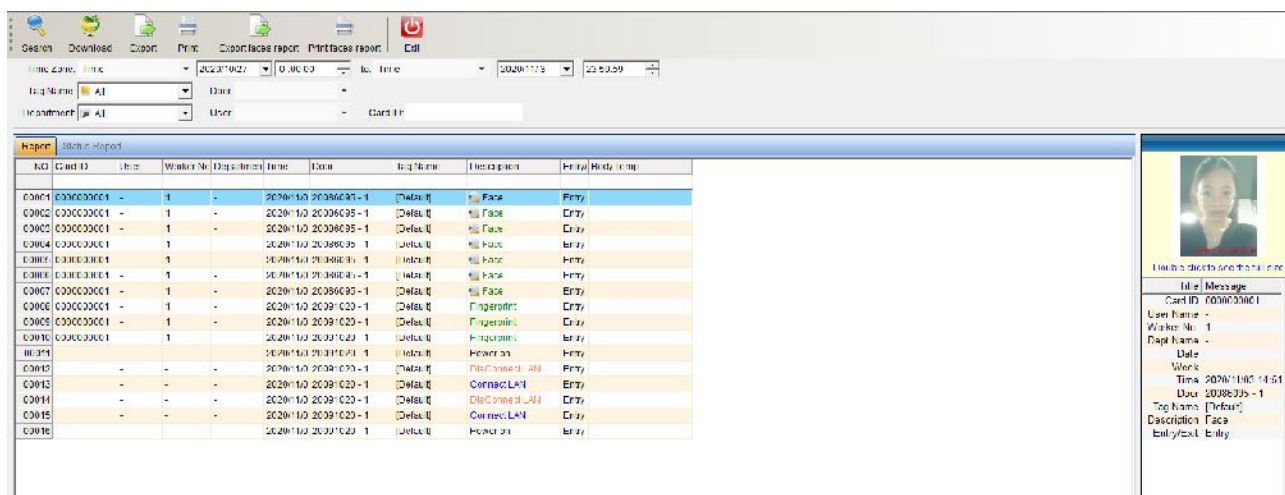


ID	Card ID	User	Worker No.	Department	Time	Location	Log Name	Description	Entry	Exit
C0001	C000000001	-	1	-	2020-11-01 20:00:00	-	Default	Face	Entry	
C0002	C000000001	-	1	-	2020-11-01 20:00:05	-	Default	Face	Exit	
C0003	C000000001	-	1	-	2020-11-01 20:00:10	-	Default	Face	Entry	
C0004	C000000001	-	1	-	2020-11-01 20:00:15	-	Default	Face	Exit	
C0005	C000000001	-	1	-	2020-11-01 20:00:20	-	Default	Face	Entry	
C0006	C000000001	-	1	-	2020-11-01 20:00:25	-	Default	Face	Exit	
C0007	C000000001	-	1	-	2020-11-01 20:00:30	-	Default	Face	Entry	
C0008	C000000001	-	1	-	2020-11-01 20:00:35	-	Default	Face	Exit	
C0009	C000000001	-	1	-	2020-11-01 20:00:40	-	Default	Fingerprint	Entry	
C0010	C000000001	-	1	-	2020-11-01 20:00:45	-	Default	Fingerprint	Exit	
C0011	C000000001	-	1	-	2020-11-01 20:00:50	-	Default	Fingerprint	Entry	
C0012	C000000001	-	1	-	2020-11-01 20:00:55	-	Default	Fingerprint	Exit	
C0013	C000000001	-	1	-	2020-11-01 20:01:00	-	Default	Disconnected LAN	Entry	
C0014	C000000001	-	1	-	2020-11-01 20:01:05	-	Default	Connected LAN	Exit	
C0015	C000000001	-	1	-	2020-11-01 20:01:10	-	Default	Disconnected LAN	Entry	
C0016	C000000001	-	1	-	2020-11-01 20:01:15	-	Default	Connected LAN	Exit	

You can also export the queried records and click **"Export"** to export personnel entry and exit records.

Chapter 7 Cloud System Operation Instructions


7.1 Installing Facial Terminal

Firstly, set the communication parameters of the facial terminal. Select **[Communication Settings]** from the main menu of the facial terminal, and then select **[Server Settings]** to set the corresponding parameters. The reference settings are shown in the following figure:

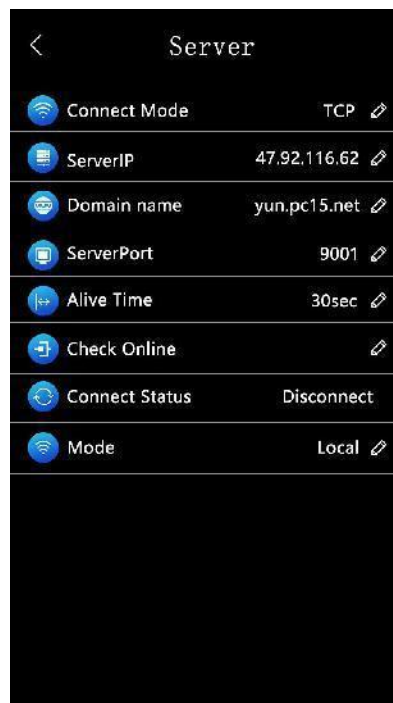


Connect to the network, configure the parameters, click Test Connection, and the prompt **"Success"** indicates that the connection is complete.

PC search website: **yun.pc15.net**, log in the cloud platform account of the One Card Management Platform, as shown in the following figure:

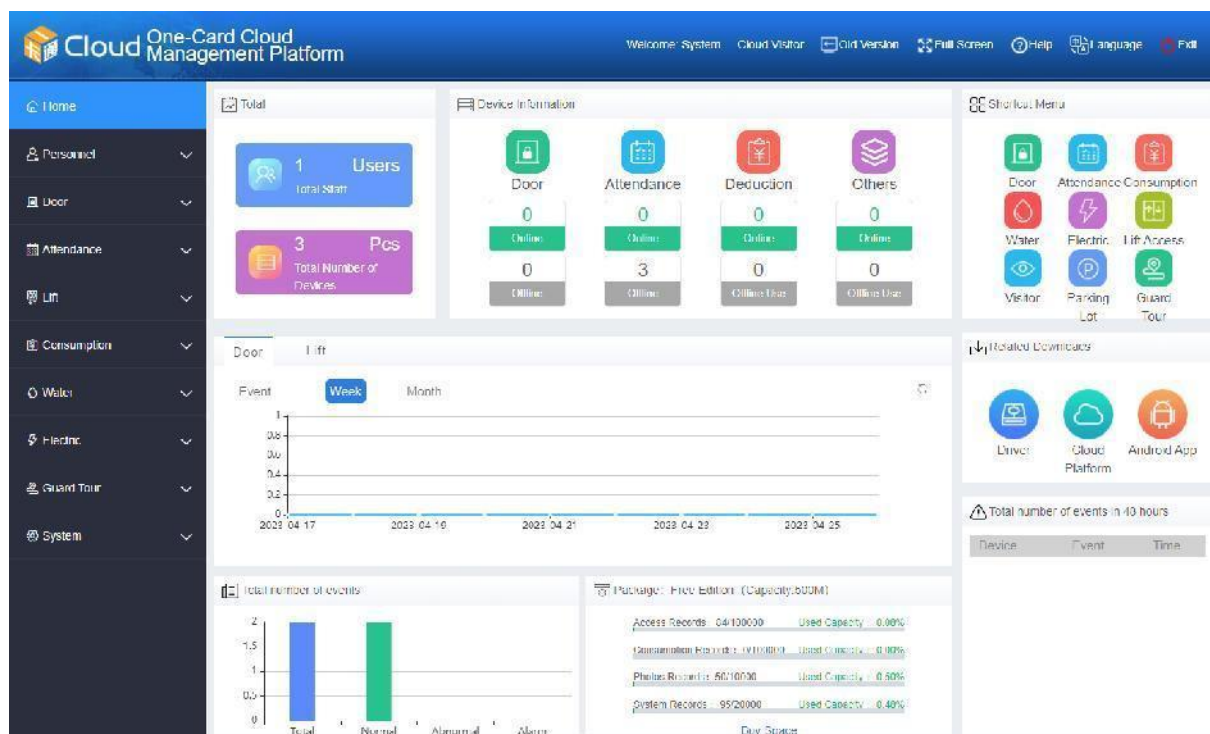

Click on the **[Door Access] - [Install]** pop-up interface in the directory bar, enter the SN code of the device to be installed, and click “Yes”, as shown in the following figure:

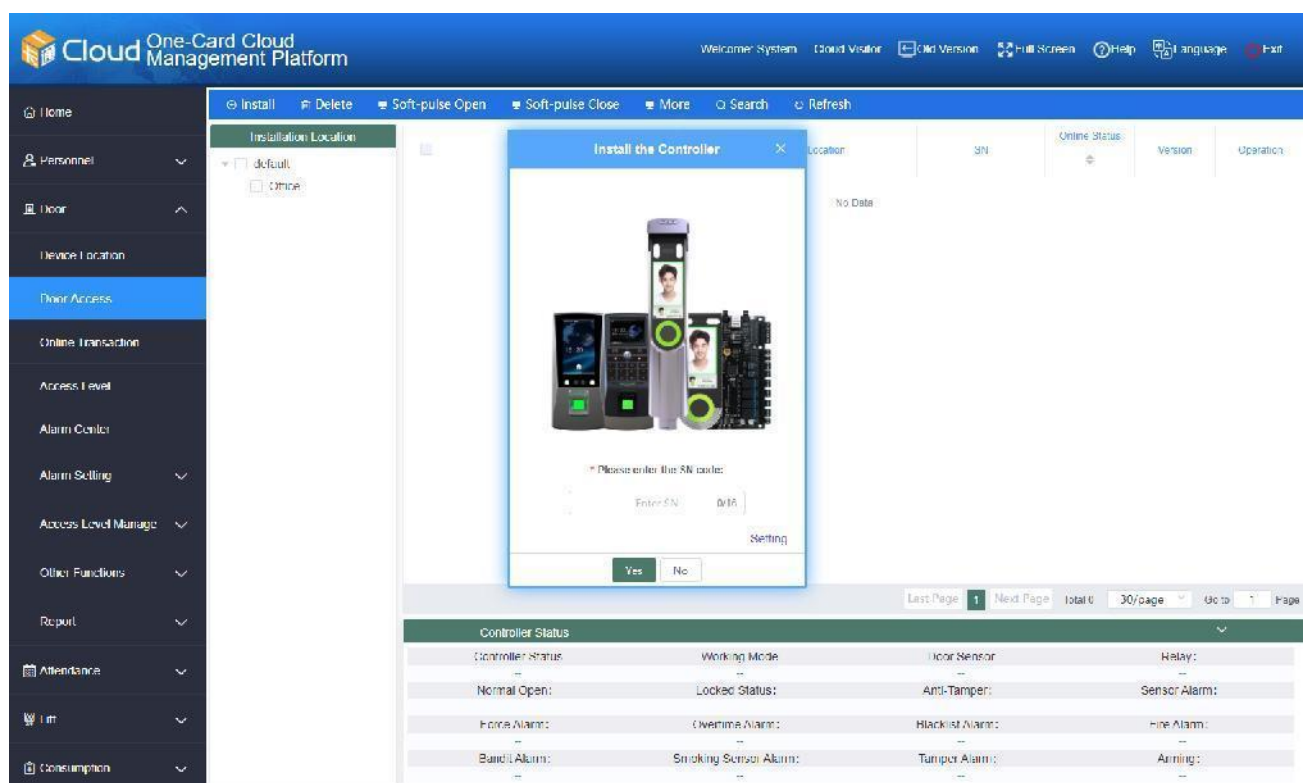

In the pop-up installation interface, the installation interface is shown in the following figure.

Select the location to install, select the basic parameters of the device, and then click **[Install]** in the bottom of right corner. At this time, the device installation will be successful.

7.2 Add personnel and authorization

7.2.1 Add User

Click **[Personnel]** - **[Add]** to open the **[Card User Database]** interface, enter the personnel information to be added, and click OK, as shown in the following figure:

7.2.1 User Authorization

Click **【Door】** **【Access Level】**, select the personnel who need to set access control permissions, and then click on “Next”, as shown in the following figure:


【>】 : Select “User”

【<】 : Delete “The Selected User”

【>>】 : Select “All Users”

【<<】 : Remove “All Selected Users”


Select the personnel who need to set access control permissions, and after selecting them, click Next, as shown in the following figure:

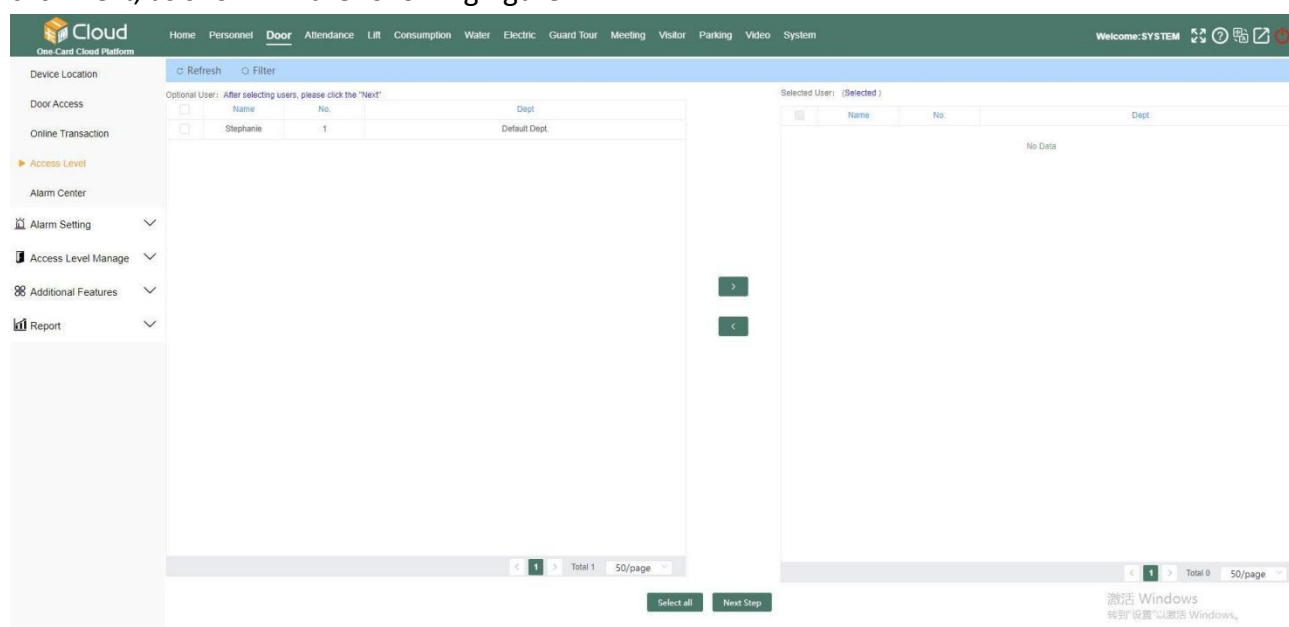

According to actual needs, select parameters such as opening time zone, opening times, validity period, door name, installation location, etc., and select the door for authorization, as shown in the following figure:

【Delete】 : Delete the specified user's access level of the selected door.

【Allow】 : Add the specified user's access level of the selected door.

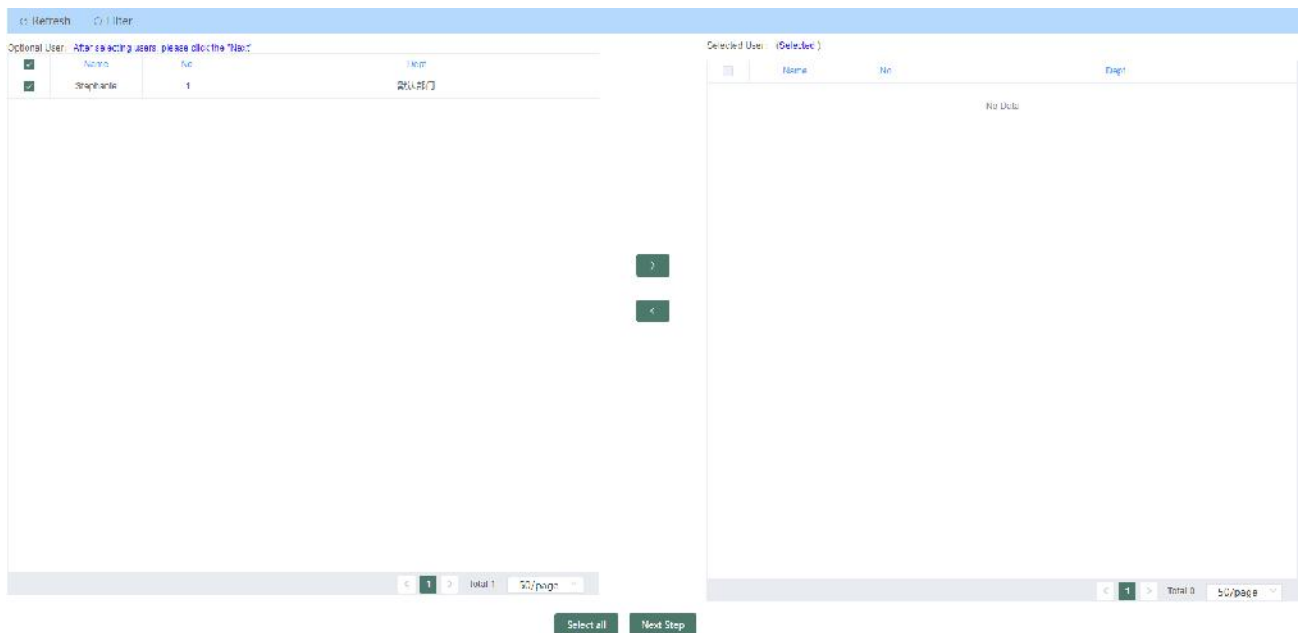


7.3 Record Viewing

Click on **[Door Access]** in the left column of the **[Access Report]** page, select the records you want to view or export, including access records, alarm records, and system records.

Click the search button to filter the records of the facial terminal you want to view according to the requirements, as shown in the following figure:

Click the export button on the left side of the search button to export the Excel table for the required records.

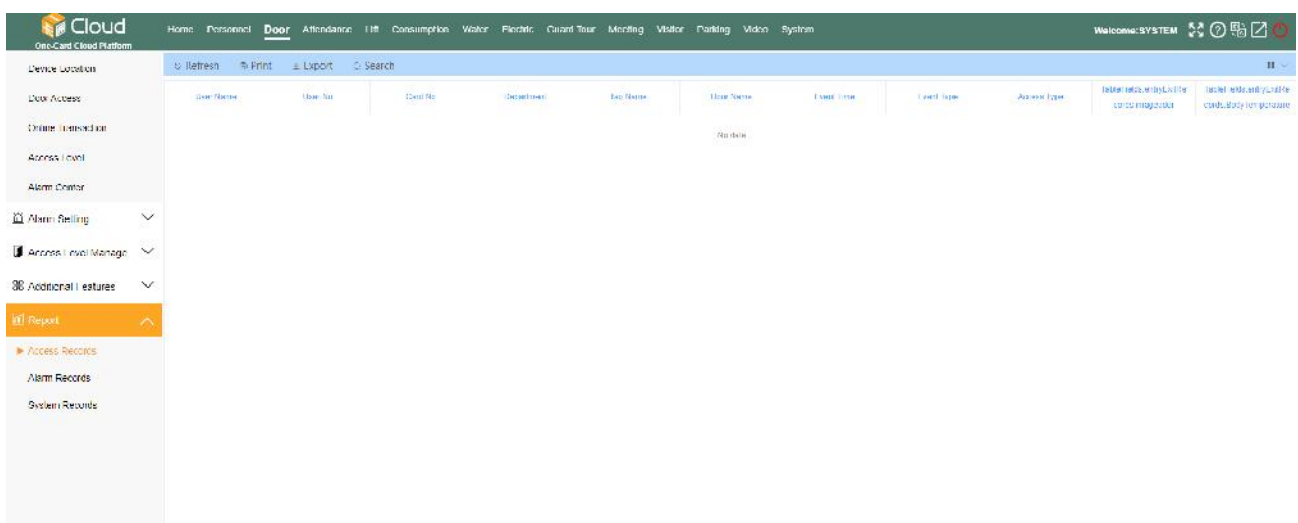

Appendix 1 Precautions for Installation Process

1. Before and during installation, please ensure that the power is turned off. If operated with power, it may damage the equipment circuit.
2. After the wiring is completed, please wrap the excess wire ends to avoid short circuits.
3. In areas with severe static electricity or in winter, please connect the ground wire before installation to prevent excessive instantaneous static electricity from damaging the equipment.
4. Please connect other cables before connecting the power cable. If you find that the device cannot operate properly, please disconnect the power cable first and then conduct necessary inspections.
5. Please test the door switch when there is someone outside the door to avoid accidental issues that may cause it to be locked inside the door.
6. The rated working voltage of this device is DC 12V and the rated current is 2A. The power supply should also consider the current requirements of accessories such as the electric lock, to avoid problems such as unsuccessful startup of the facial terminal or weak electric lock drive caused by abnormal power supply if the power supply does not meet the requirements.
7. If the facial terminal power is provided by the access control board, please refer to whether the power output of the access control board meets the power requirements of the facial terminal.
8. Please ensure that the camera area of the facial terminal is always in a clean state to avoid stains affecting facial recognition.
9. If the distance between the power supply and the device is relatively long, do not use network cables or other types of cables to replace the power cable. When selecting a power cable, consideration should be given to voltage attenuation caused by excessive transmission distance.
10. Avoid direct exposure to strong light on the face terminal lens, as strong light can lead to poor recognition ability.
11. In a strong backlight environment, if the face recognized by the facial terminal is too black and recognition is affected, please increase the supplement light to increase the brightness of the face,

which can improve the recognition effect.

12. Use high-quality power supply to avoid the impact of poor quality power supply on facial recognition and touchscreen insensitivity. (Poor quality power supplies may burn out the motherboard due to leakage)

13. If installed on strong current equipment such as a turnstile gate, please connect the ground wire to avoid strong current leakage or motor interference affecting the effectiveness of the facial terminal.

Appendix 2 Introduction to Face Enroll and Usage


The schematic diagram for adjusting the size of face enroll is shown in the following figure




In order to ensure the quality and accuracy of the parameter enrolled of the face terminal, keep a natural expression during the enroll process. Please do not wear a hat, glasses and other factors to affect the face enrolled, do not let the bangs cover the face, and do not wear heavy makeup. Please try to put your face in the center.

When using face terminal, you should pay attention to the camera and avoiding excessive coverage of eyes, hats, and masks.


Appendix 3 Device Dimension

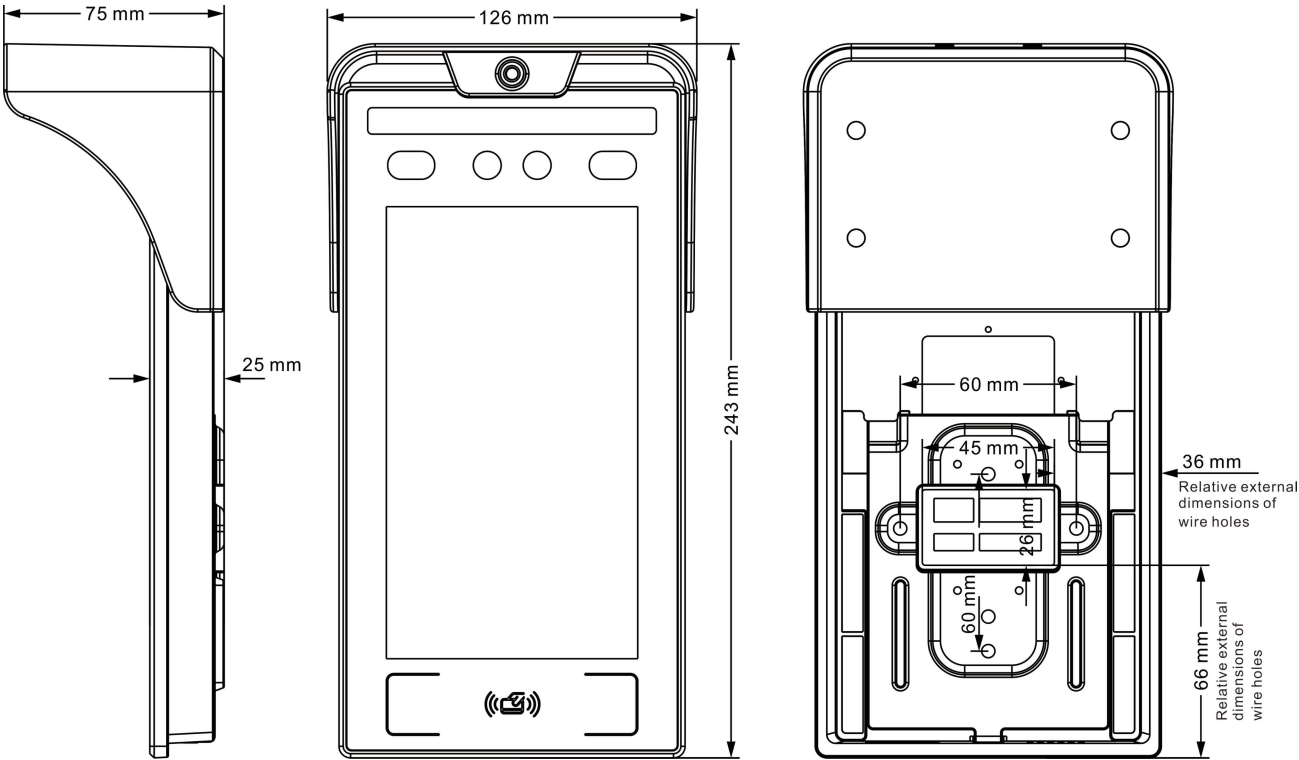

A Model Dimension

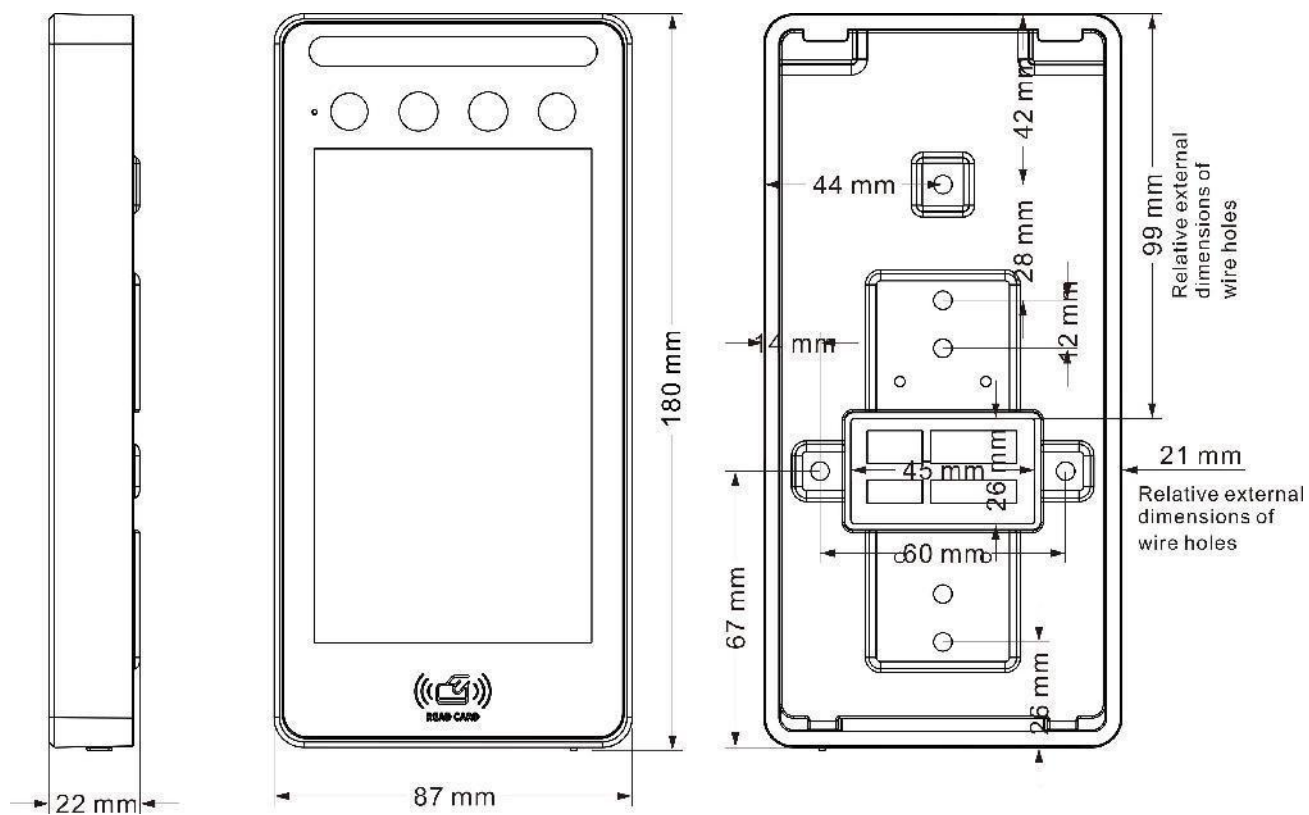

B Model Dimension

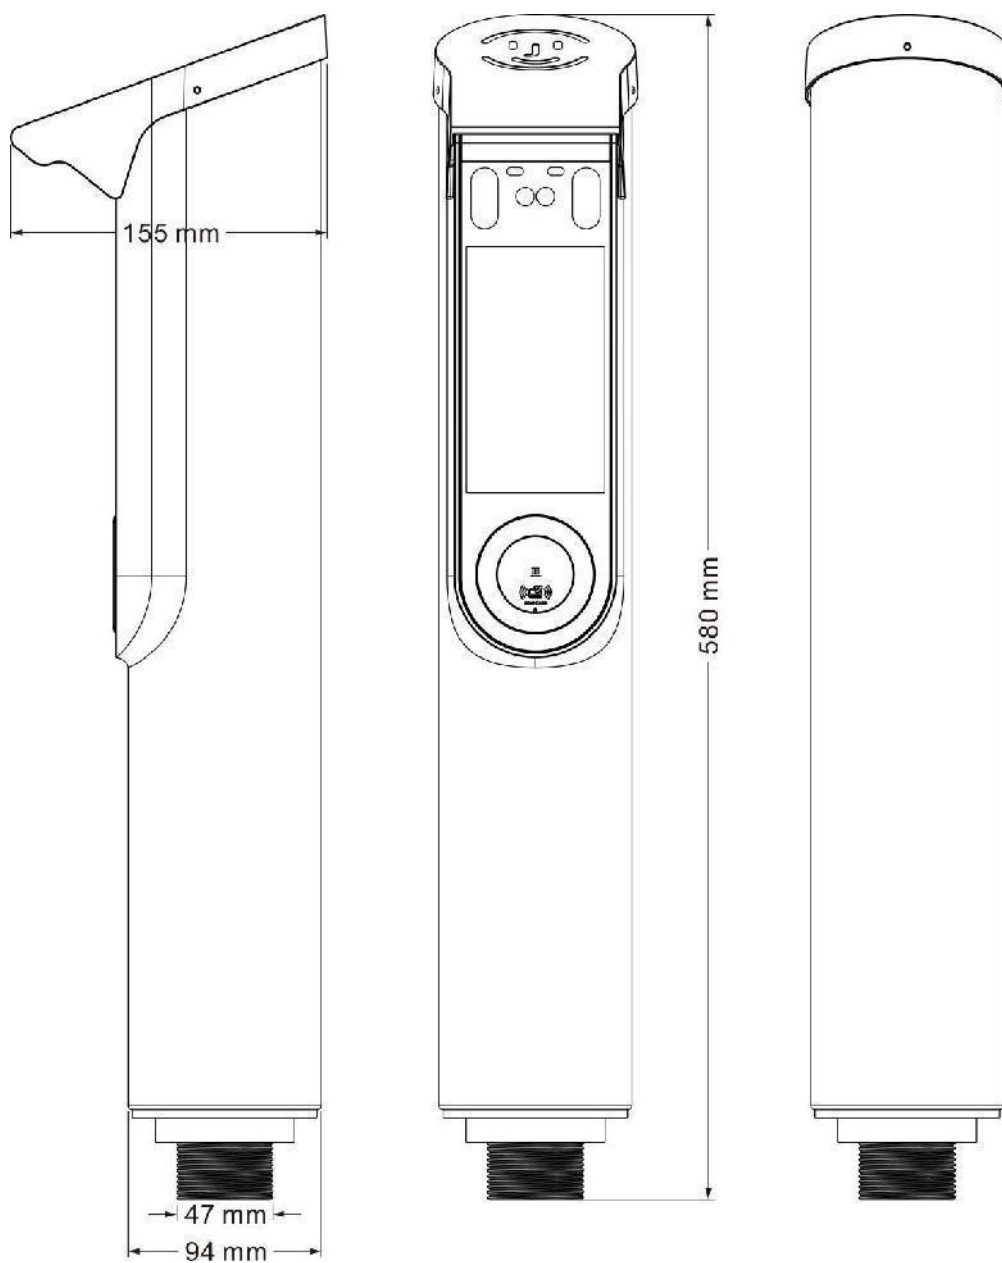

D Model Dimension